

VEHICLE DYNAMIC SUSPENSION


AIR SUSPENSION AIR FILTER (G 4 2 6 7 6 9)

REMOVAL AND INSTALLATION					
64.50.12	FILTER - INTAKE - RENEW	ALL DERIVATIVES	0.20	USED WITHINS	+

REMOVAL

1. Open the liftgate and tailgate.
2. Remove the spare wheel and tire.

3.

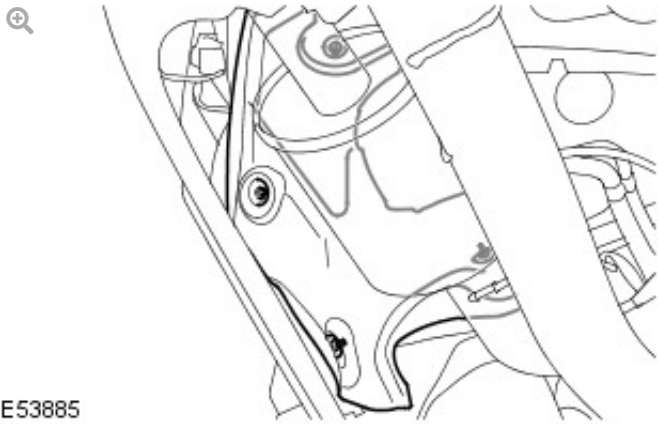


E53885

Remove the 4 nuts securing the LH rear tail pipe heat shield.

4. Reposition the LH rear tail pipe heat shield.
5. Disconnect the air suspension intake filter pipe.


6.

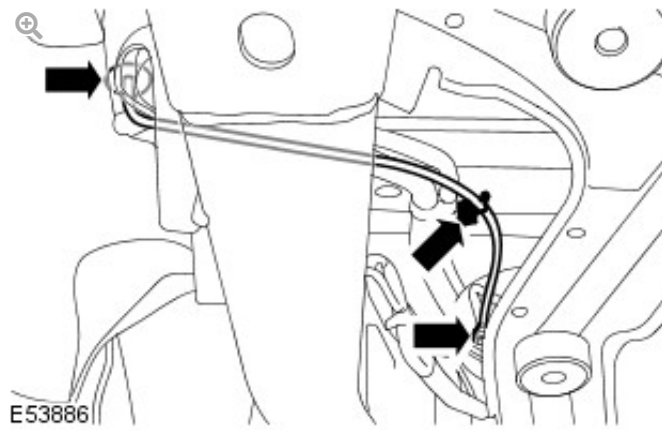

Detach the air suspension intake filter.


- Release the grommet.
- Release from the clip.

7.

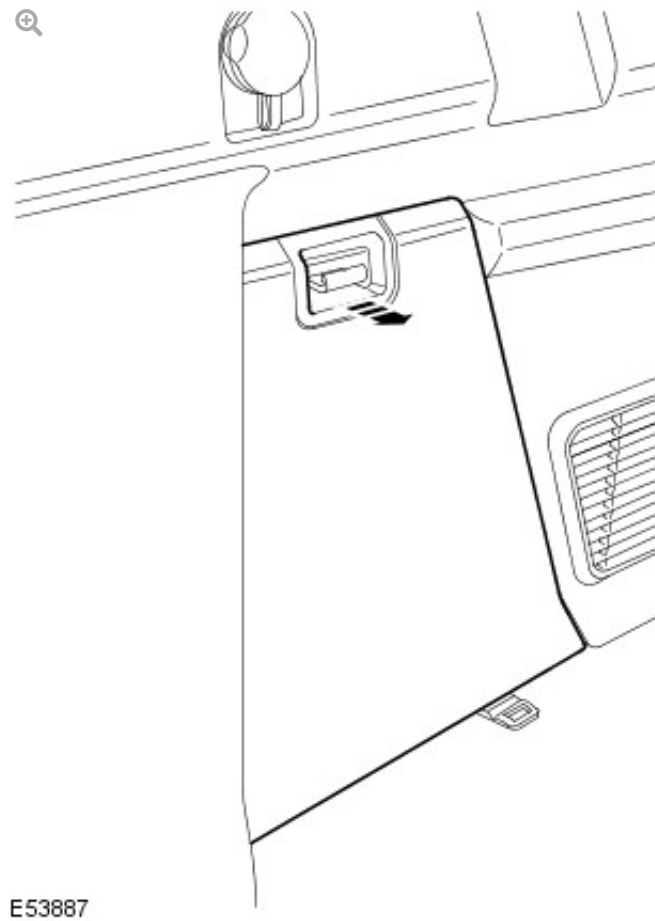

Remove the LH lower rear quarter trim access panel.

8.

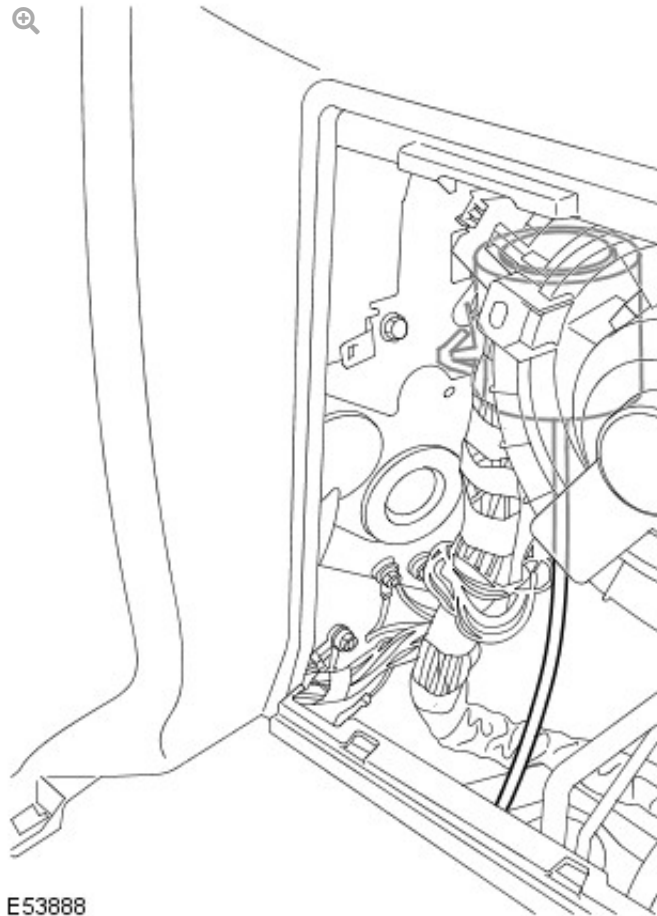

Remove the air suspension intake filter.

INSTALLATION

1. Install the air suspension intake filter.
 - Install the grommet.
 2. Install the LH lower rear quarter trim access panel.
 3. Attach the air suspension intake filter.
 4. Connect the air suspension intake filter.
 5. Reposition the LH rear tail pipe heat shield.
 - Install the nuts.
 6. Install the spare wheel and tire.
-

7. Close the liftgate and tailgate.