

Ultrasonic space protection

Ultrasonic space protection is only activated when the alarm is armed using the handset. Twin sensors monitor the interior space and activate the alarm if an intrusion into the passenger compartment is detected (entry gained through a window or sunroof, for example).

ENGINE IMMOBILISATION

Engine immobilisation is an important aspect of the security system, and includes a feature known as 'passive immobilisation'. This is designed to safeguard the vehicle from theft should the driver forget to lock the doors and ensures that the engine is immobilised automatically whenever any of the following conditions occur:

- when the vehicle is locked using the handset or key.
- thirty seconds after the starter switch has been turned off AND the driver's door opened.
- five minutes after the starter switch is turned off, or the alarm system is disarmed.

The engine will be re-mobilised automatically whenever the key is inserted into the starter switch, provided the handset is kept on the key ring in close proximity to the starter switch.

WARNING


To ensure that the engine is automatically re-mobilised when the key is inserted into the starter switch, always keep the handset on the same keyring as the key.

Locks & Alarm

ENGINE IMMOBILISATION OVERRIDE

(Entering the emergency key access code)

If the handset is lost or fails to operate, the engine can be re-mobilised by using the key to enter a unique four digit emergency key access code. The code is recorded on the Security Information card and is entered as follows:

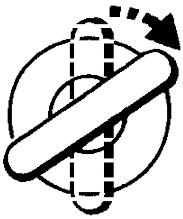


1. Using the key, turn the driver's door lock (clockwise) to the LOCK position and hold in this position for at least 5 seconds. Then return the key

to the centre position (as shown). It is now possible to use the key to enter the separate numerical values of the four digits that make up the emergency key access code.

IMPORTANT INFORMATION


When entering a code:

- ENSURE each key movement is carried out with care and precision and turned through the full extent of its travel.
- After turning the key to either the lock or unlock positions, make sure it is FULLY returned to the centre (vertical) position.
- If a digit is entered incorrectly, the WHOLE code can be cancelled by returning to operation '1' and starting again.

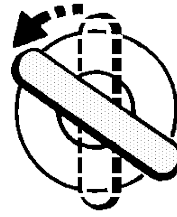


2. Enter the FIRST digit of the code. If the first digit is 4, turn the key (anti-clockwise) to the UNLOCK position 4 times. Ensure the key is

FULLY returned to the centre position after each turn of the key.

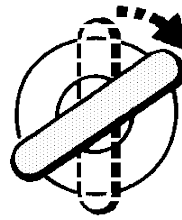


3. Enter the SECOND digit of the code. If the second digit is 3, turn the key to the LOCK position 3 times. Remember; the key must be FULLY

returned to the centre position after each turn of the key.

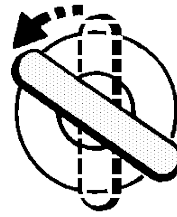


4. Enter the THIRD digit of the code. If the third digit is 2, turn the key to the UNLOCK position twice, ensuring that the key is FULLY returned to

the centre position after each turn of the key.

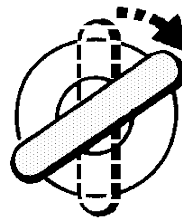

5. Enter the FOURTH digit of the code. If the fourth digit is 1, turn the key to the LOCK position once. Ensure the key is FULLY returned to the

centre position after the key has been turned.

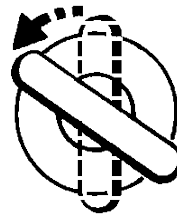

6. FINALLY, turn the key to the UNLOCK position once more to disarm the alarm and re-mobilise the engine. If the code has been entered

successfully, the anti-theft alarm indicator light on the instrument panel will extinguish and the engine can be started.

Locks & Alarm

If an incorrect code has been entered:

If the code has been entered incorrectly, the sounder will bleep twice and the anti-theft alarm indicator light will continue to flash. In this case, return to '1' and re-enter the code.

After three failed entry attempts, the security system invokes a delay period of thirty minutes during which the system will not accept any further attempts to enter a code.

NOTE: *Once the engine immobiliser has been deactivated by entering the emergency key access code, it will remain inactive until a handset is next used to lock the vehicle.*

WARNING

- ***NEVER leave the Security Information card in the vehicle.***
 - ***Memorise the emergency key access code or keep the Security Information card on your person in case of emergencies (a damaged handset for example).***
-