

Handles, Locks, Latches and Entry Systems - Hood Latch Release Handle


Removal and Installation

Removal

1. **NOTE:** Hood release cable renew

Open hood.

2. Remove 8 screws securing grille.
3. Remove grille.
4. Slacken clamping bolt securing hood release cable.
5. Remove cable from lock.
6. Release cable from clip on underside of hood platform.
7. Feed cable through valance and collect grommet.
8. Release cable from clip fixed to wheelarch under expansion tank.
9. Loosen clamping nut securing hood release handle to mounting bracket.
10. Remove hood release handle from mounting bracket.
11. Withdraw cable through bulkhead.

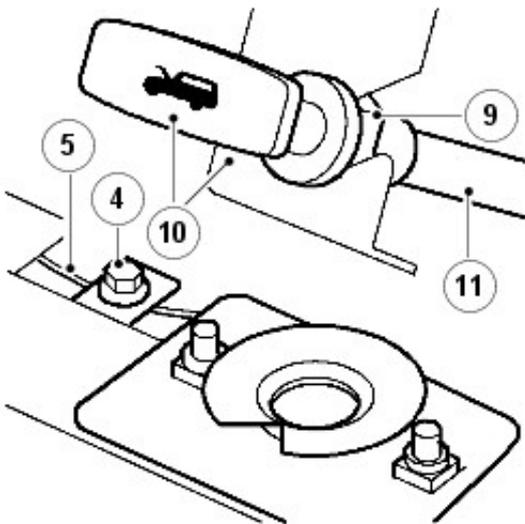

J6372

Installation

1. Feed cable through bulkhead and fit hood release handle to mounting bracket. Tighten clamping nut.
2. Route cable behind expansion tank and fit to securing clip.