

9	-	Automatic tensioner
10	-	Generator
11	-	Idler pulley
12	-	A/C compressor

## OVERVIEW

The accessory components, which comprise the coolant pump, power steering pump, engine cooling fan, generator and A/C compressor (where fitted), are driven by the engine crankshaft pulley via the accessory drive belt.

The belt is a maintenance free poly-V type belt, automatically pre-loaded by the automatic tensioner and routed over idler pulleys in order to maintain sufficient adhesion about the accessory component pulleys. This ensures a slip-free drive of the accessory components.