

Engine Emission Control - ID4 2.2L Diesel - Exhaust Gas Recirculation (EGR) Valve


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. For additional information, refer to: [Engine Cover](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. For additional information, refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
3. For additional information, refer to: [Cooling System Draining, Filling and Bleeding](#) (303-03 Engine Cooling - ID4 2.2L Diesel, General Procedures).

4. Torque: Bolt 22Nm Torque: Nut 6Nm

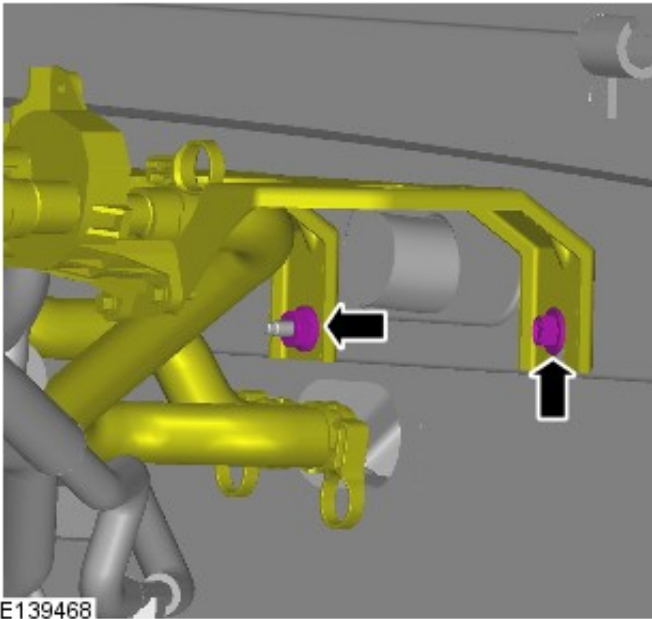

5. Torque: 23Nm

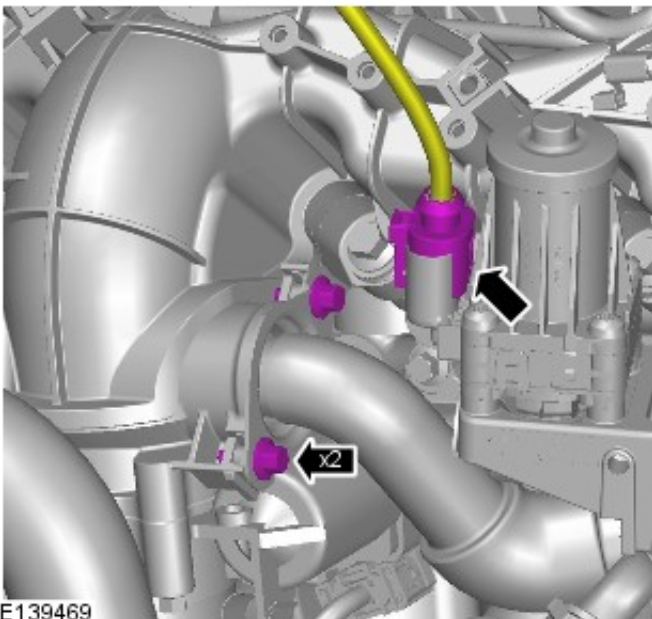

6. Torque: 10Nm