


Handles, Locks, Latches and Entry Systems - Exterior Front Door Handle

Removal and Installation


Removal

1. Remove door trim panel.
For additional information, refer to: Front Door Trim Panel (501-05, Removal and Installation).
2. Remove door reinforcement panel and support glass with timber.
For additional information, refer to: Front Door Reinforcement Panel (501-03, Removal and Installation).
3. Disconnect operating rod from handle mechanism.
4. Disconnect rod from locking barrel lever.

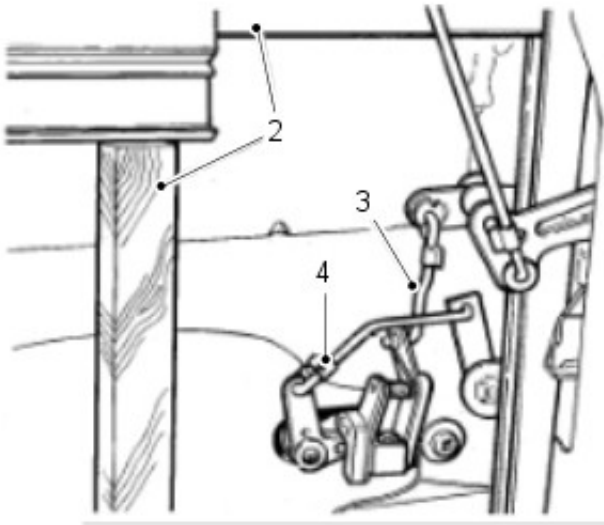

ST1982M

5. Remove 2 screws and withdraw handle assembly.

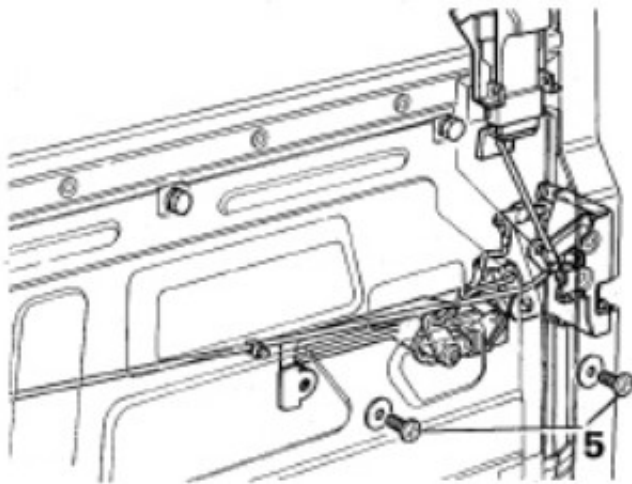

ST1970M

Installation

1. Install handle to door ensuring that two bezels are in position - flat faces towards door, and secure with 2 screws.
2. Connect rod to handle operating lever and secure with spring clip.
3. Connect rod to locking barrel lever and secure with spring clip.