

PUBLISHED: 28-APR-2017  
2015.0 RANGE ROVER (LG), 303-04

FUEL CHARGING AND CONTROLS - TDV8 4.4L DIESEL

# FUEL PUMP (G1509447)

**SPECIAL TOOL(S)**



## JLR-303-1571

Locking Tool, Crankshaft  
Damper



## JLR-310-246

Locking Tool, Fuel Injection  
Pump



## JLR-310-248

Aligner, Fuel  
Pump

### PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 4	Renew Part	High pressure fuel pump bracket bolts	1
Installation Step 5	Renew Part	Fuel rail supply pipe	1
Installation Step 6	Renew Part	Fuel rail supply pipe	1

## REMOVAL



### CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

1.

Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3.

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5, General Procedures).

4.

Refer to: [Left Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).


5.


Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).


6.


Refer to: [Fuel Injection Component Cleaning](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5, General Procedures).

7.

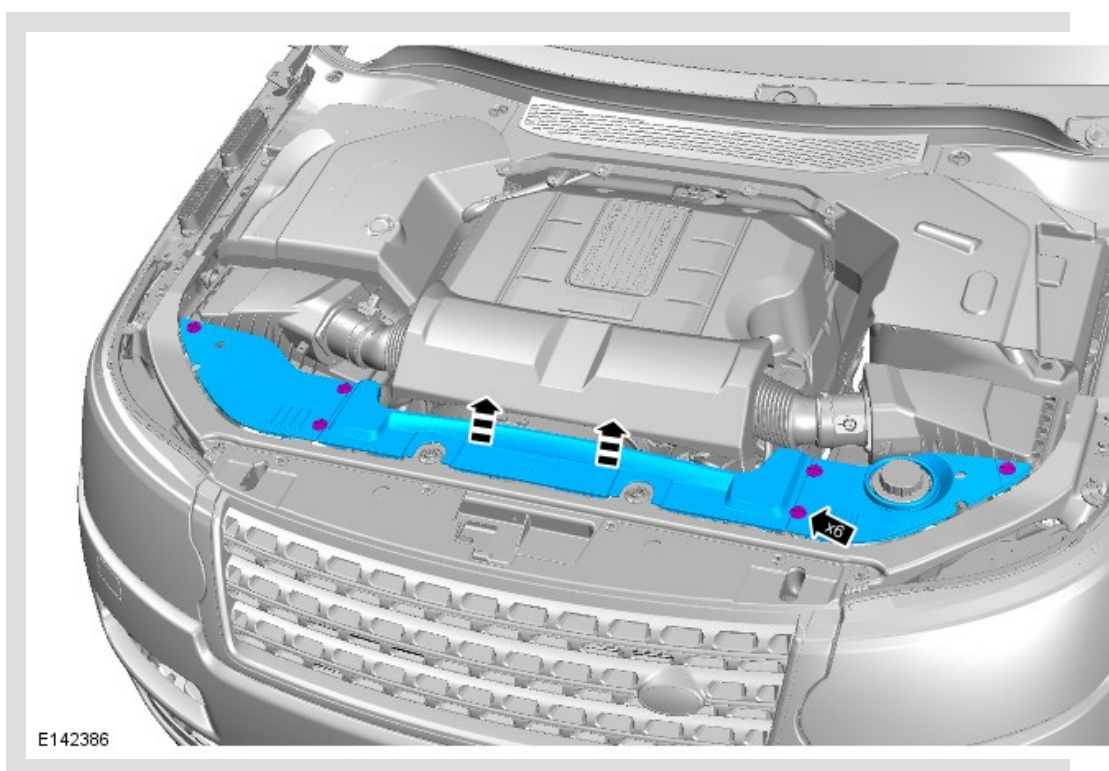


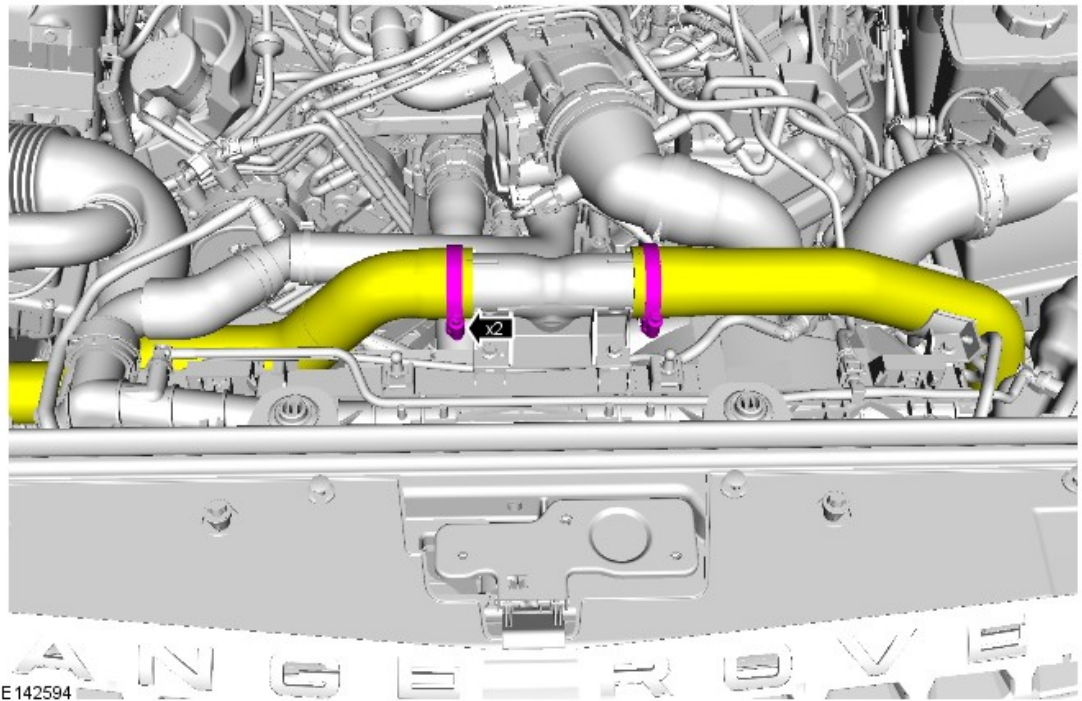

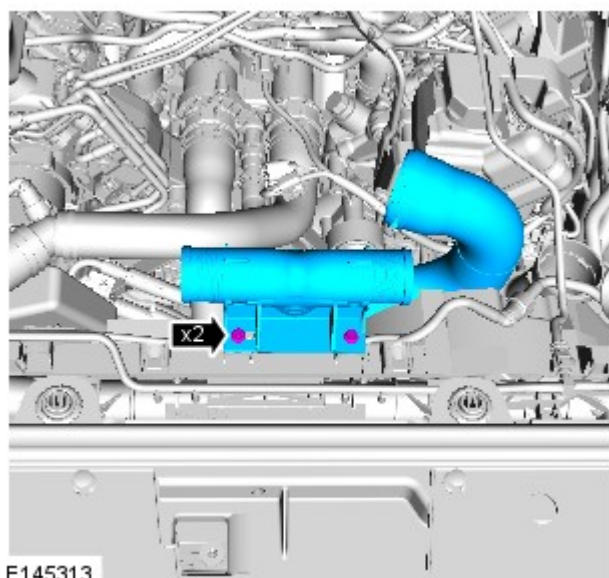


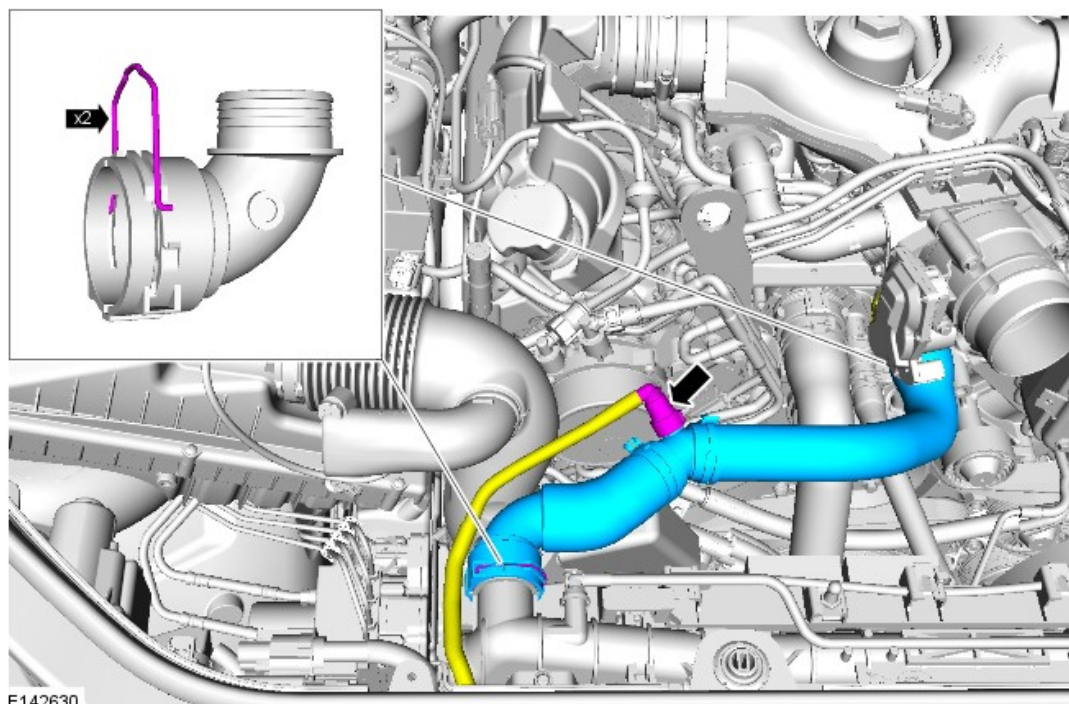




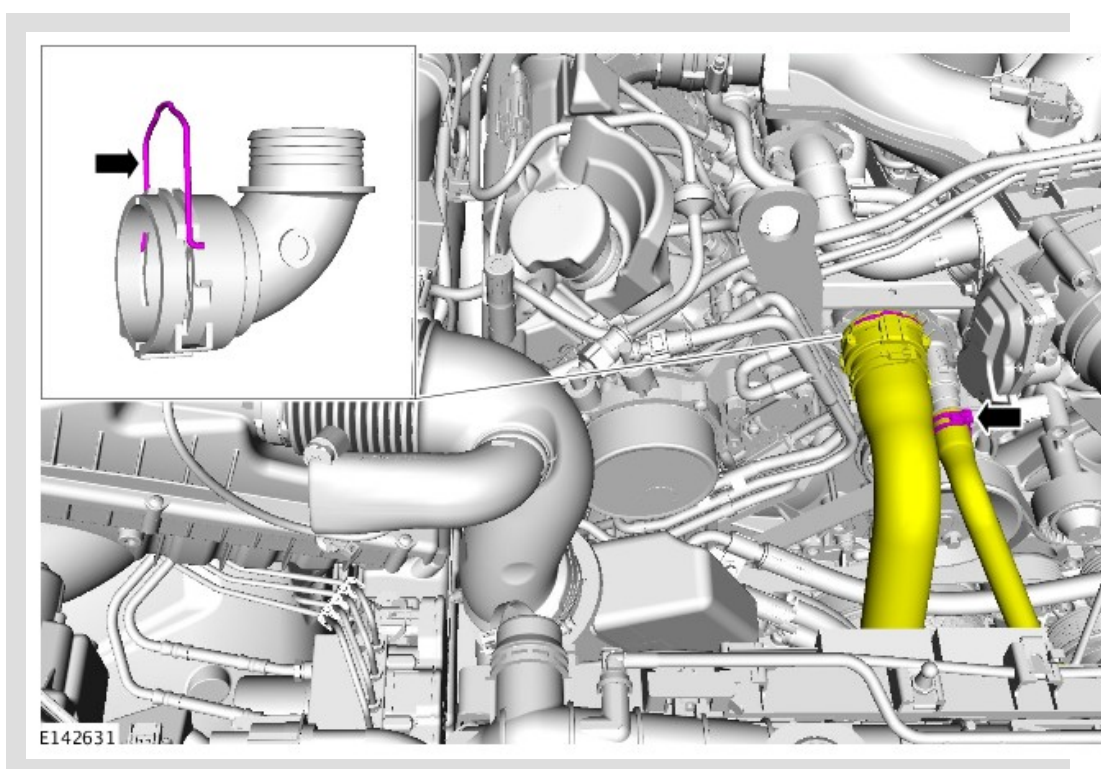

12.

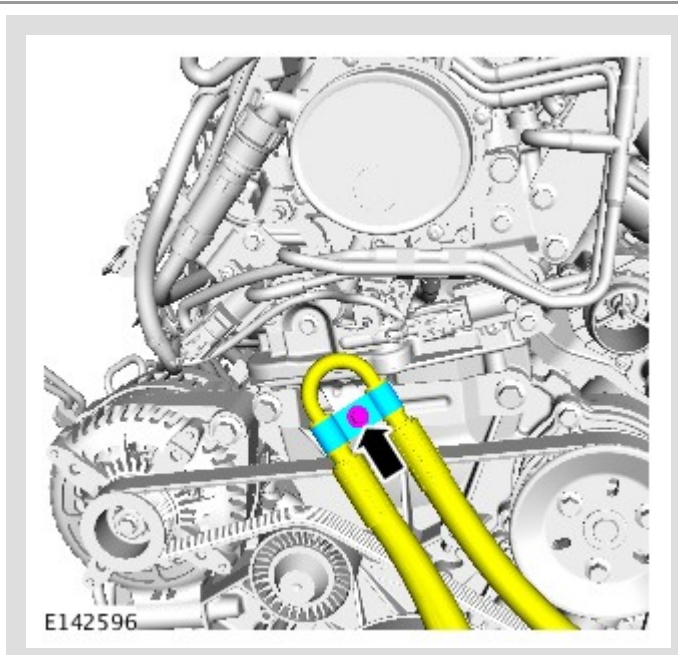

13.

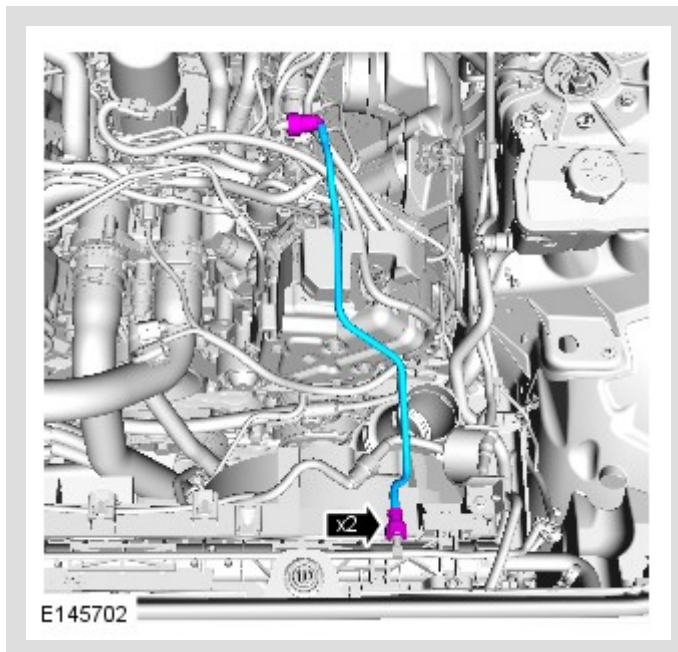


14.




**NOTE:**

Make sure that the singular round hole in the crankshaft pulley is in the 9 o'clock position.

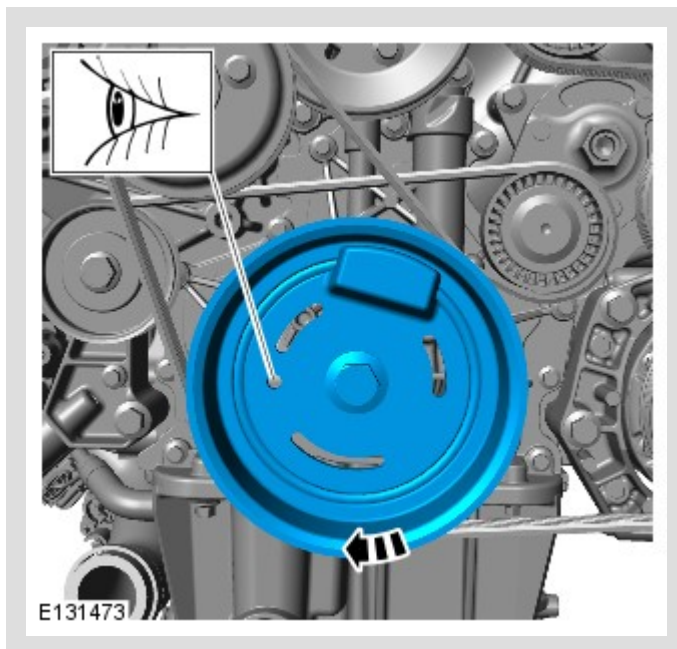


15.

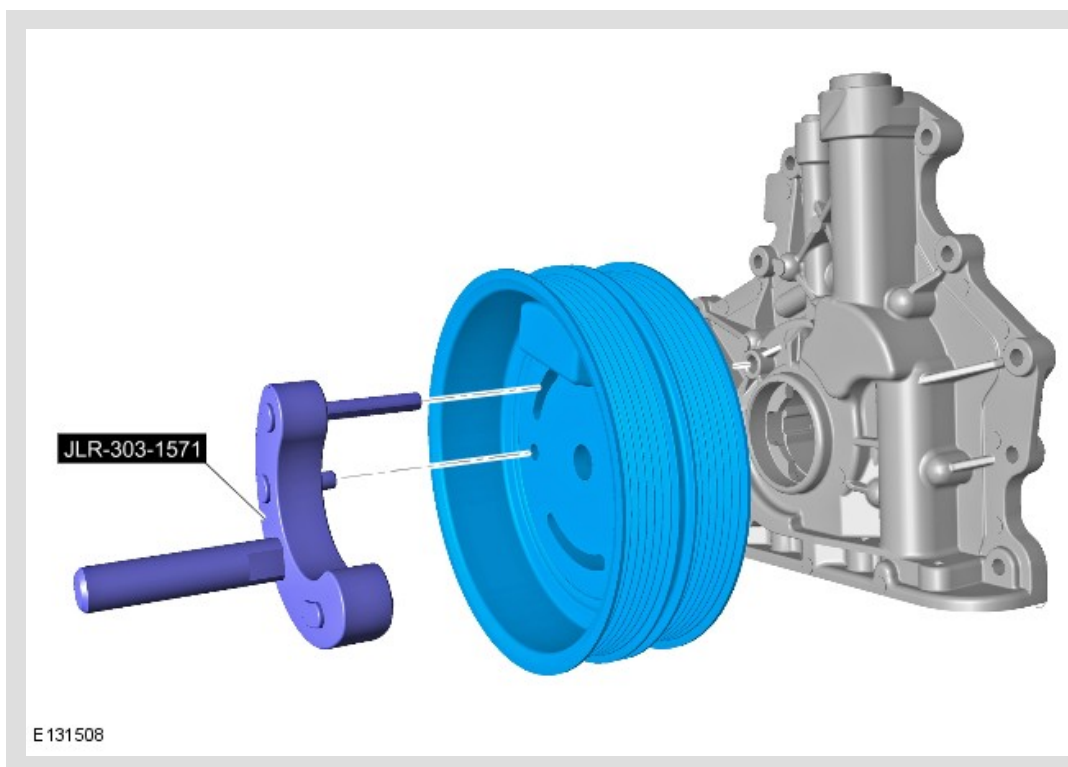


Install special tool.


16.

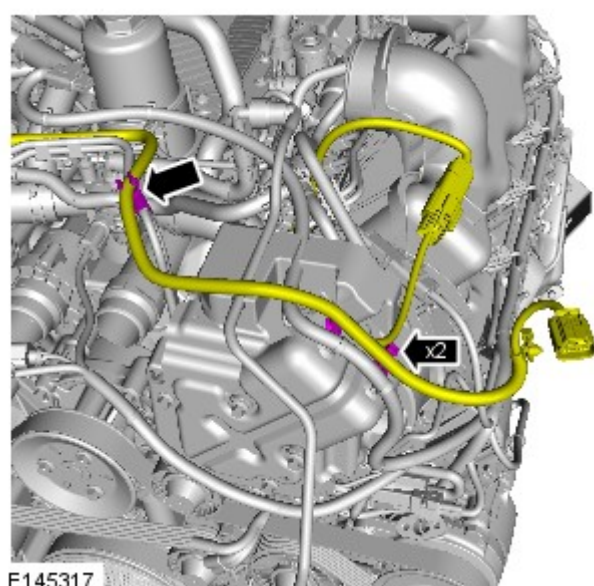

17.

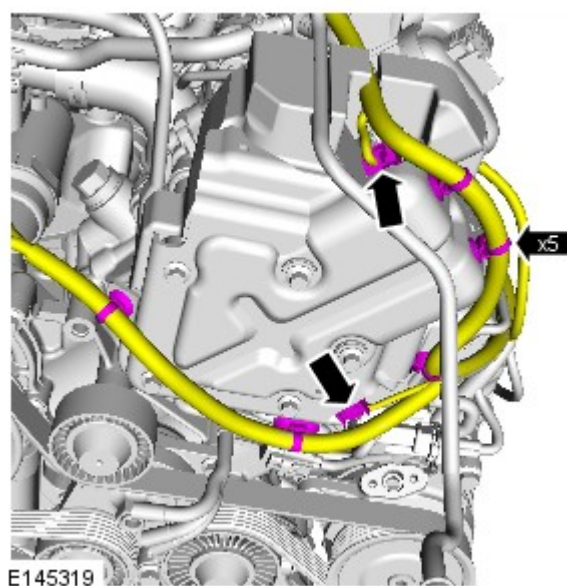

18.

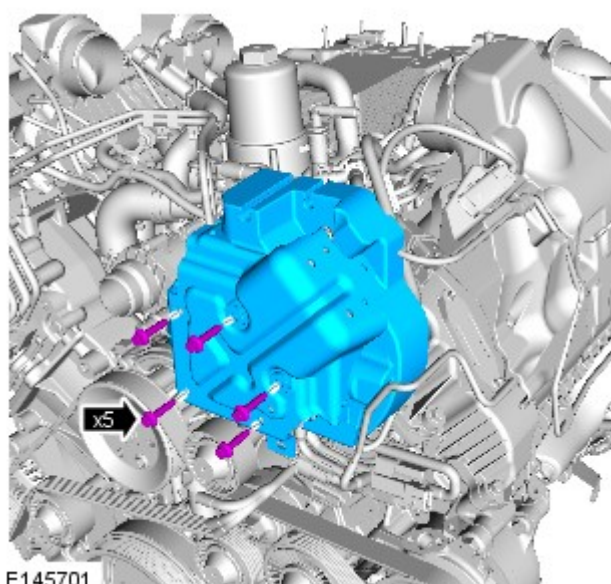


19.

**⚠ CAUTION:**


Be prepared to collect escaping fuel.



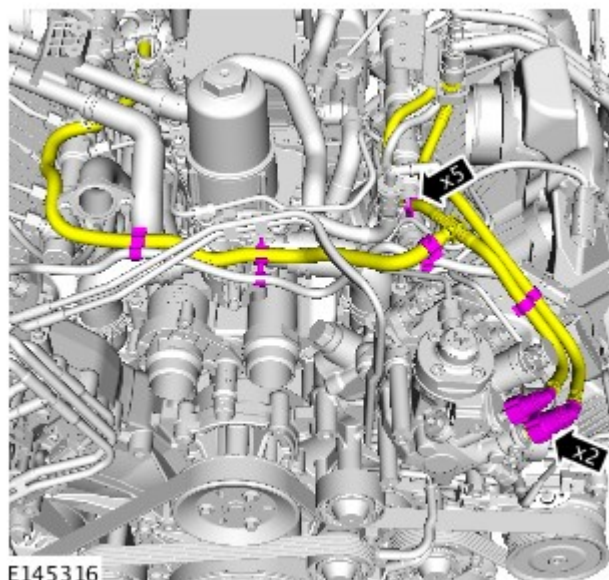

E145316

20.

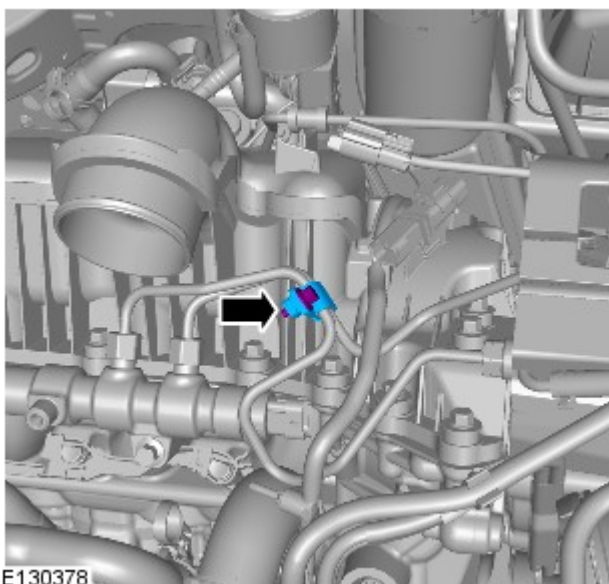


E130378

21.



NOTE:

Discard the fuel pipes.

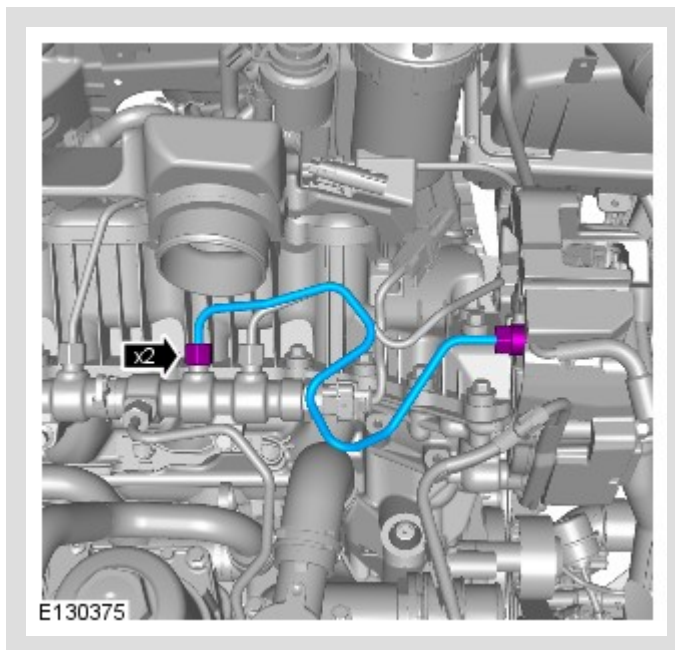


22.



**NOTE:**

Discard the fuel pipes.

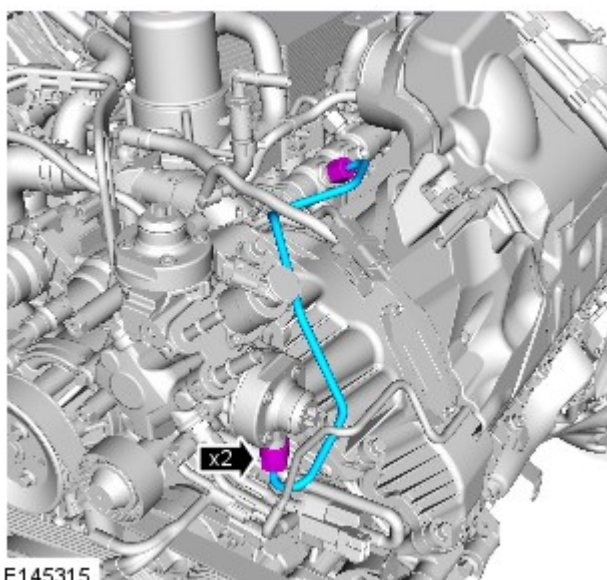


23.

**⚠ CAUTION:**

Discard the bolts.


**⚠ NOTE:**

Note the different lengths of the bolts.

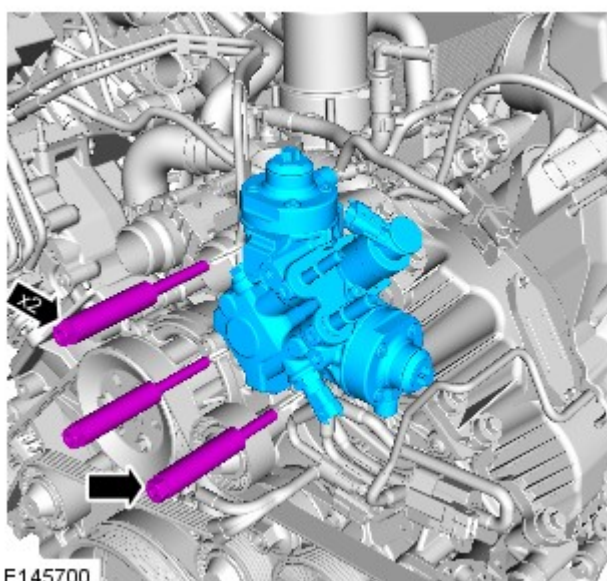



24.

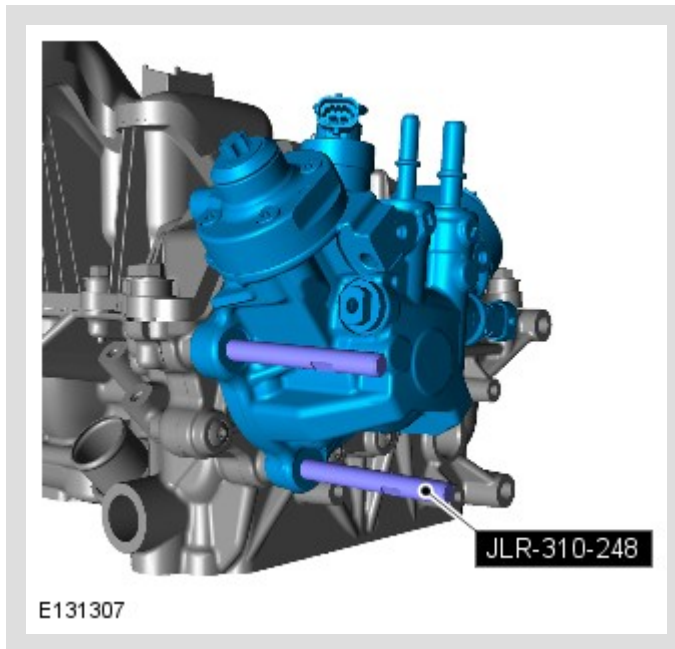

Install the 2 guide pins in the original location of the 2 bolts.


*Special Tool(s):* [JLR-310-248](#)

25.



**CAUTION:**

Ensure that the fuel pump gear does not rotate during removal.

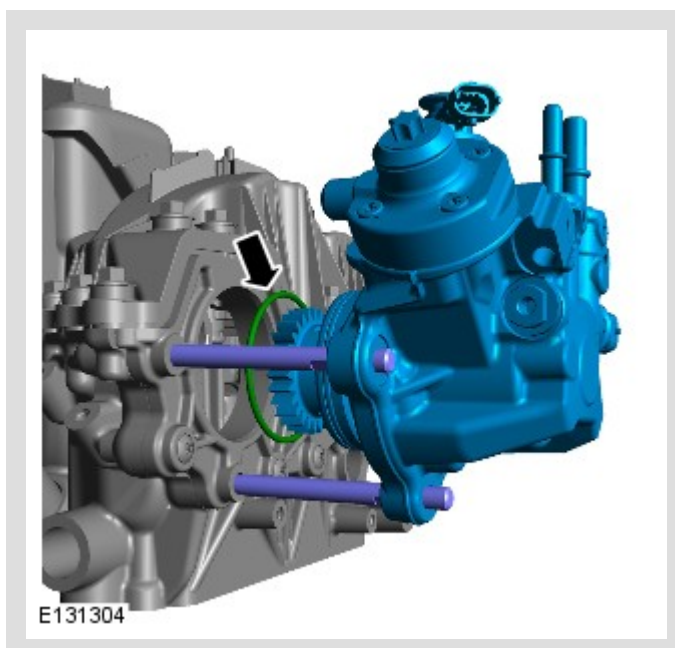


**⚠ CAUTION:**

Note position of the woodruff key prior to removal.

**⚠ NOTE:**

Do not disturb the fuel pump gear.

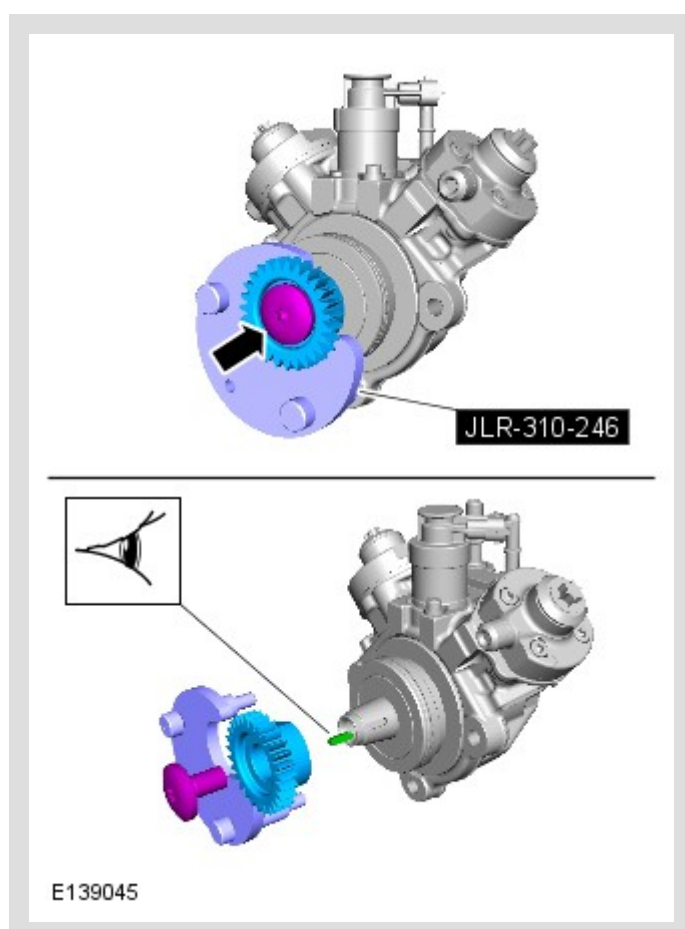

Install special tool.

*Special Tool(s):* [JLR-310-246](#)

## INSTALLATION


1.

### ⚠ CAUTION:

Make sure the woodruff key is installed to the noted removal position.

### △ NOTE:

Make sure that the fuel pump shaft is in the correct orientation before installation.

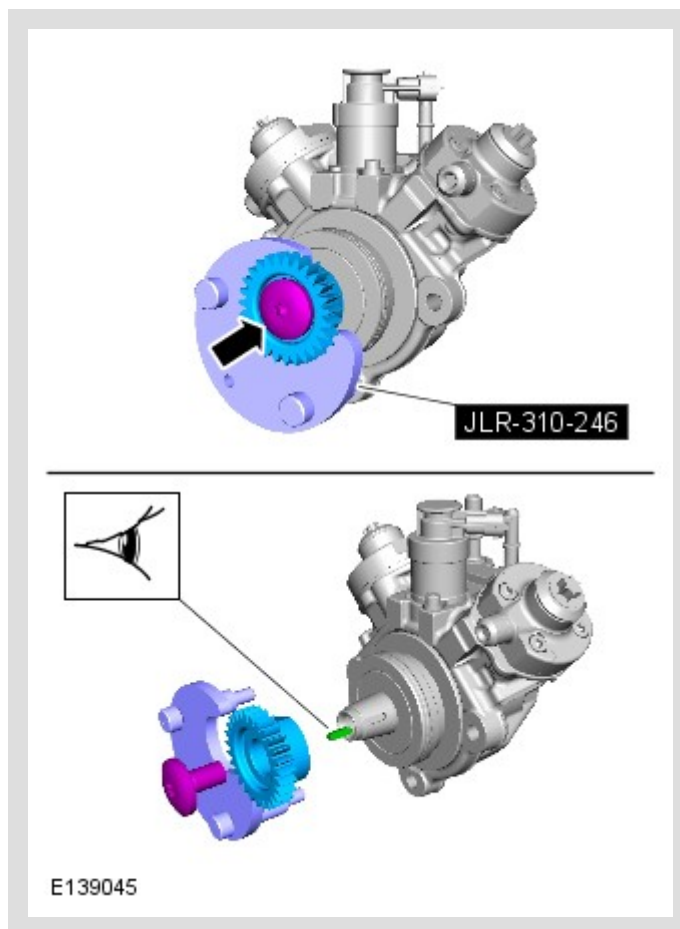

Remove the special tool.

**Torque: 60 Nm**


2.


**CAUTION:**

Ensure that the fuel pump gear does not rotate during installation.

**NOTE:**

Lubricate the O-ring seal with clean engine oil.

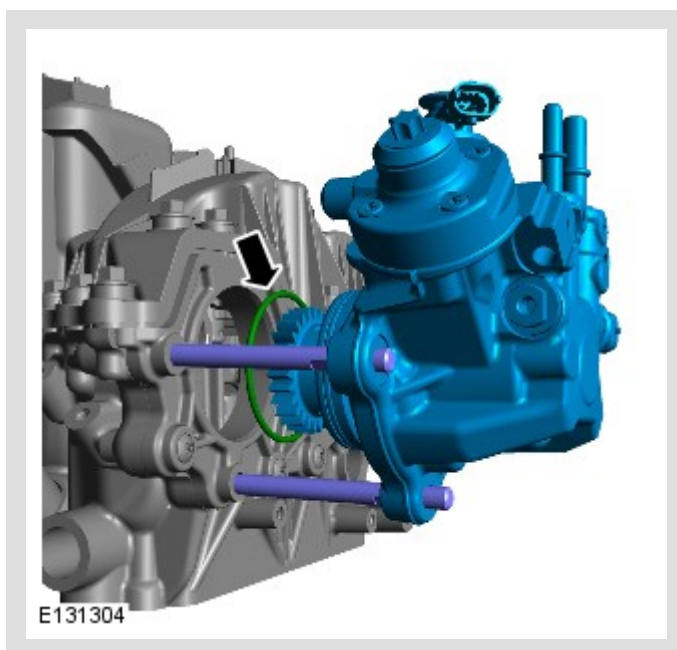

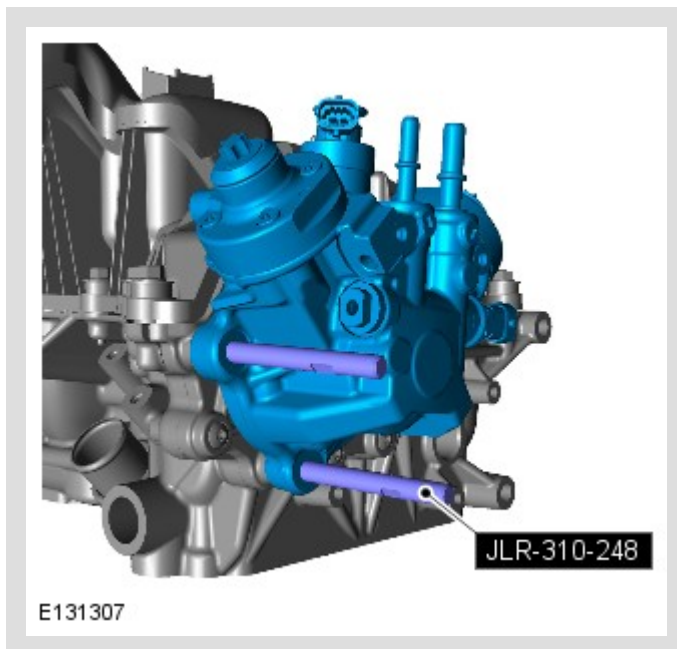


Remove the guide pins.

4.



#### CAUTIONS:

- Make sure that new bolts are installed.
- Install the bolts in the noted position.

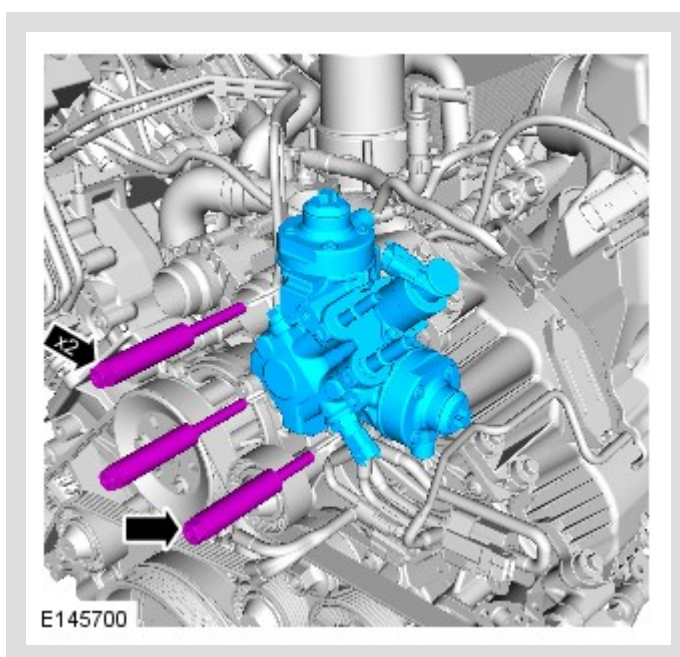

Renew Part: *High pressure fuel pump bracket bolts* : 1 .  
Torque: 24 Nm


5.

⚠ CAUTION:

Install new fuel pipes.

△ NOTE:

Only tighten the unions finger-tight at this stage.

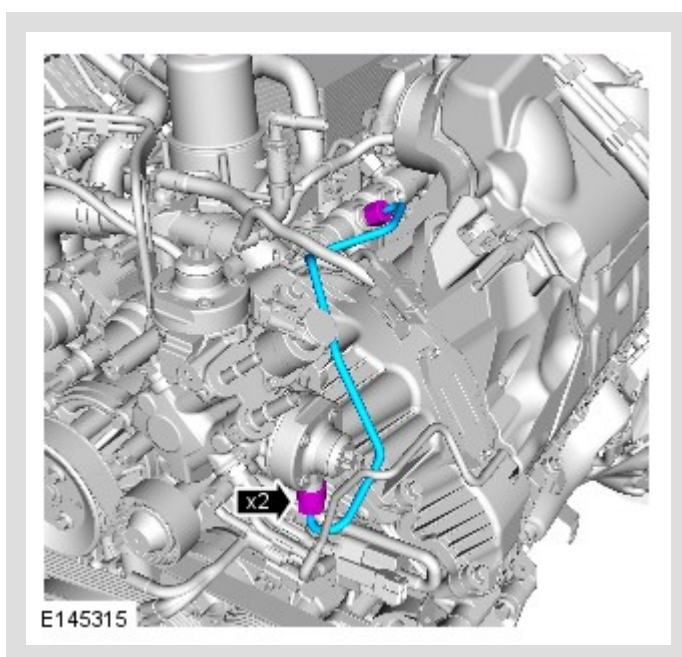

Renew Part: *Fuel rail supply pipe* : 1 .


6.

⚠ CAUTION:

Install new fuel pipes.

△ NOTE:

Only tighten the unions finger-tight at this stage.

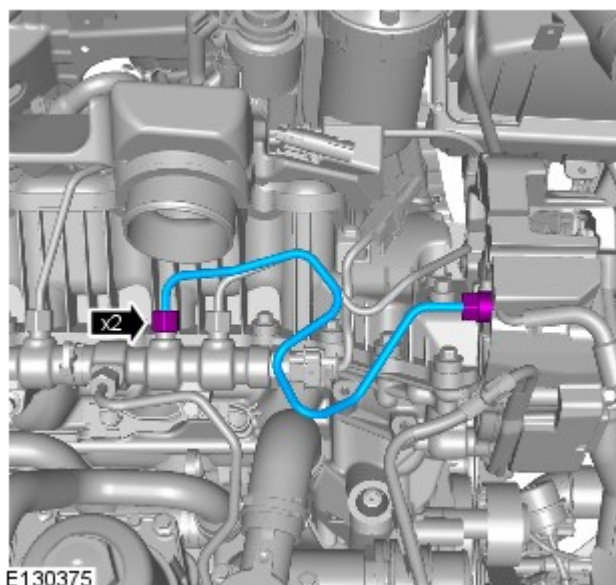

Renew Part: *Fuel rail supply pipe* : 1 .


7.



**NOTE:**


Only tighten the bolt finger-tight at this stage.



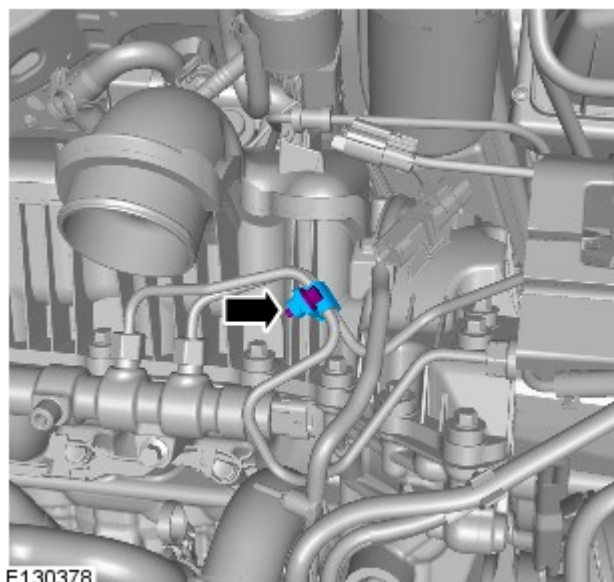

E130378


8.

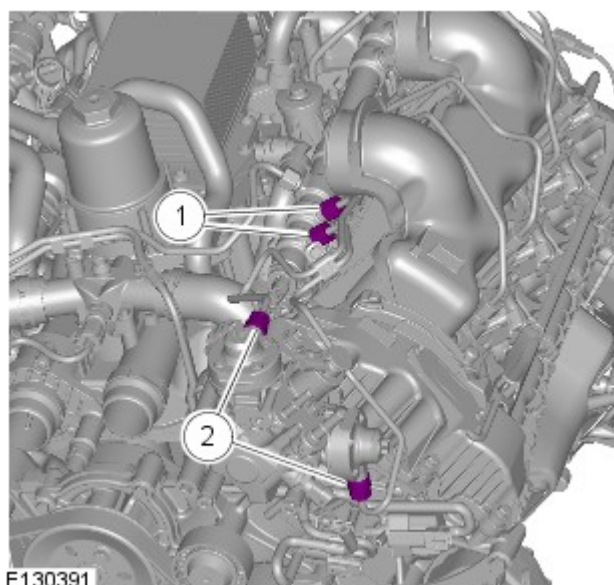

E130391

Tighten all.  
*Torque: 10 Nm*

9.

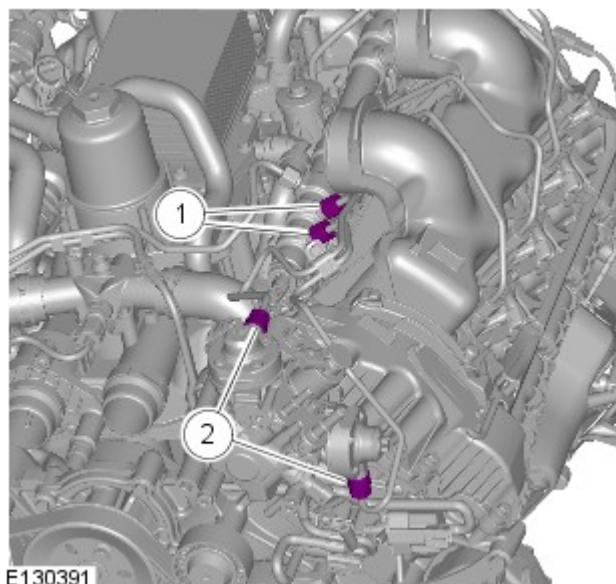


*Torque:*

1 73°

2 80°

10.

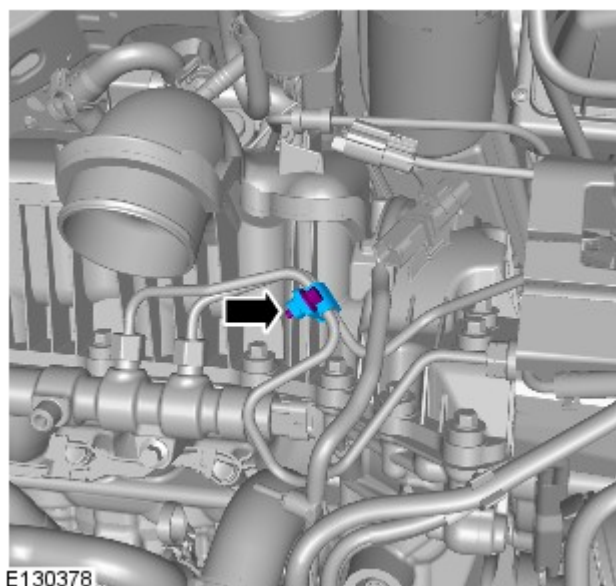


*Torque: 10 Nm*

11.




**NOTE:**

Remove and discard all blanking caps.

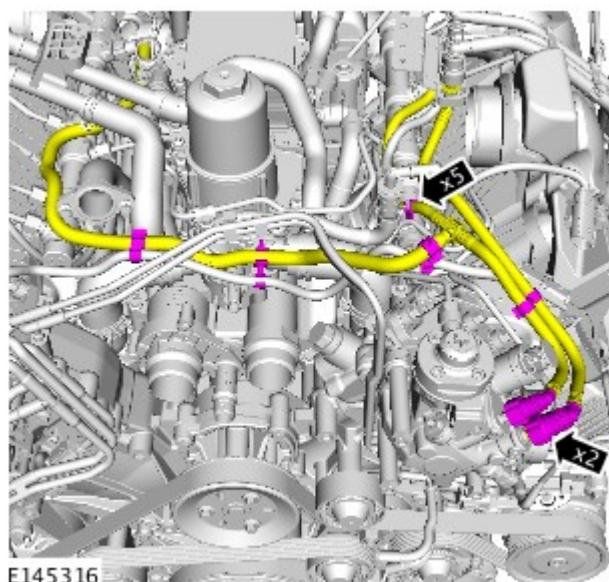


12.

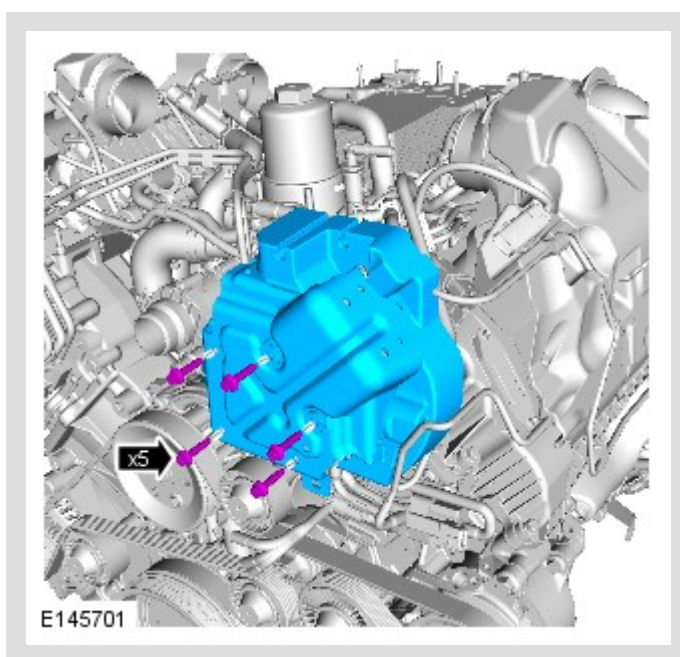


*Torque: 10 Nm*


13.

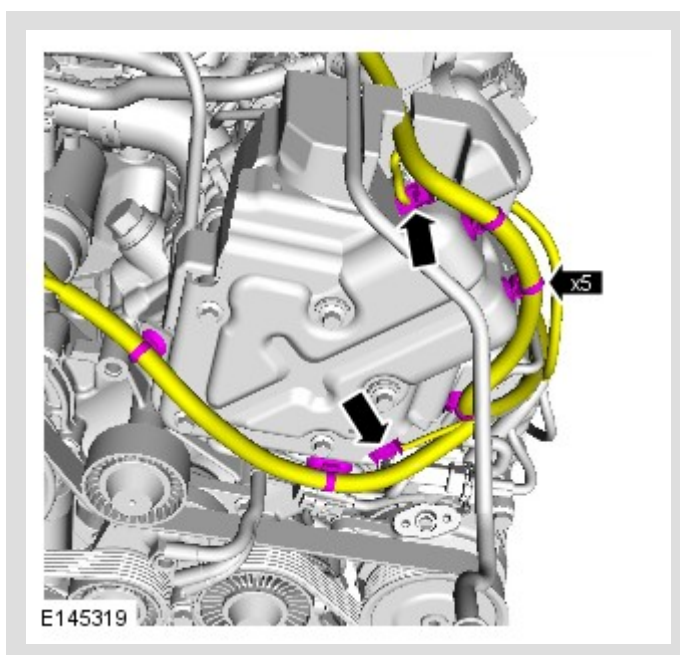

14.

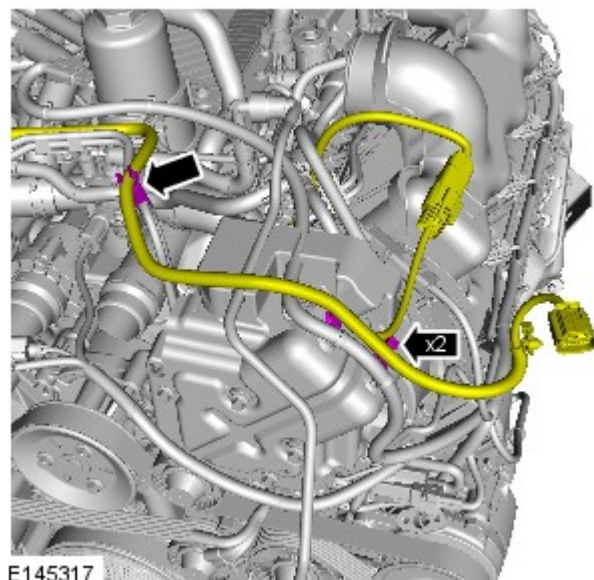


E145317

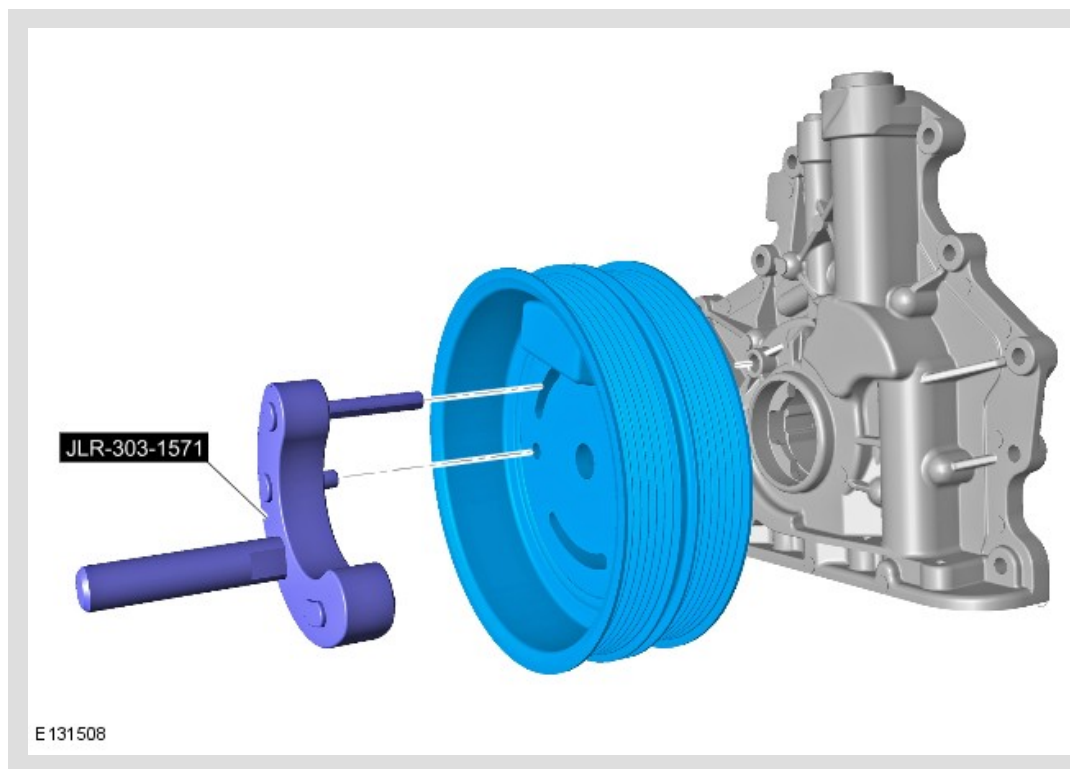


Remove the special tool.


16.

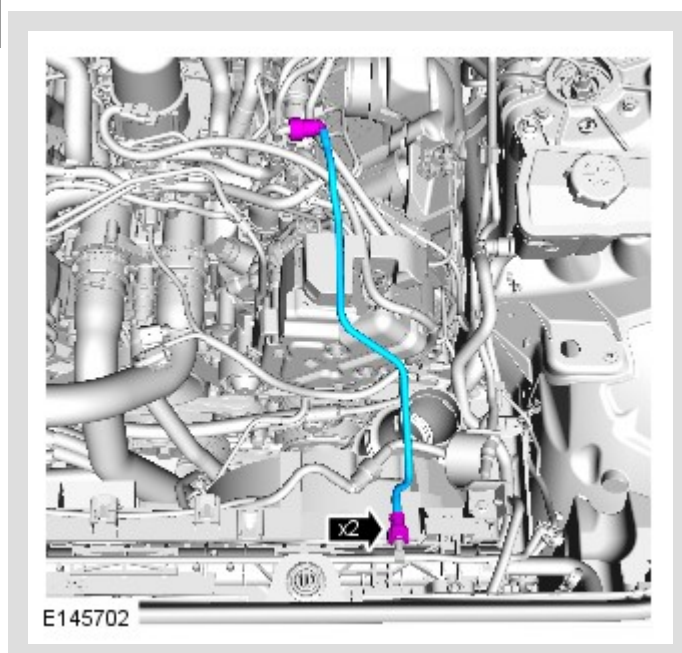




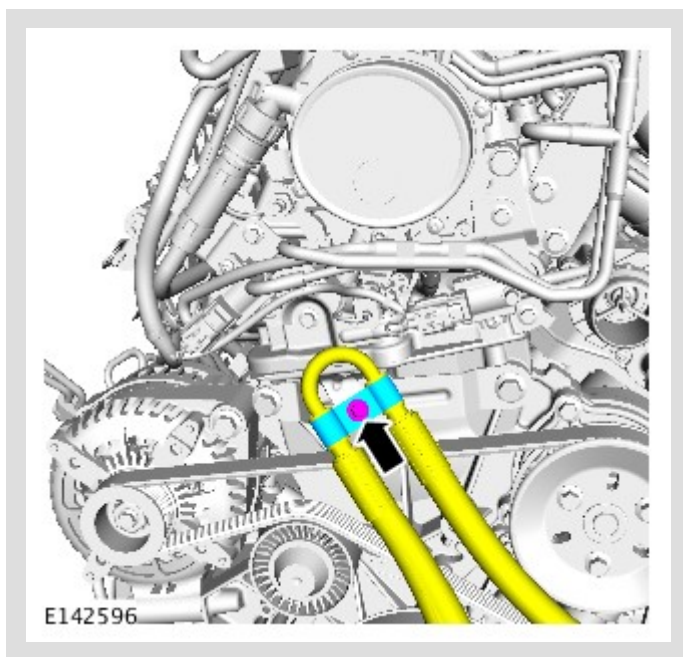

*Torque: 10 Nm*

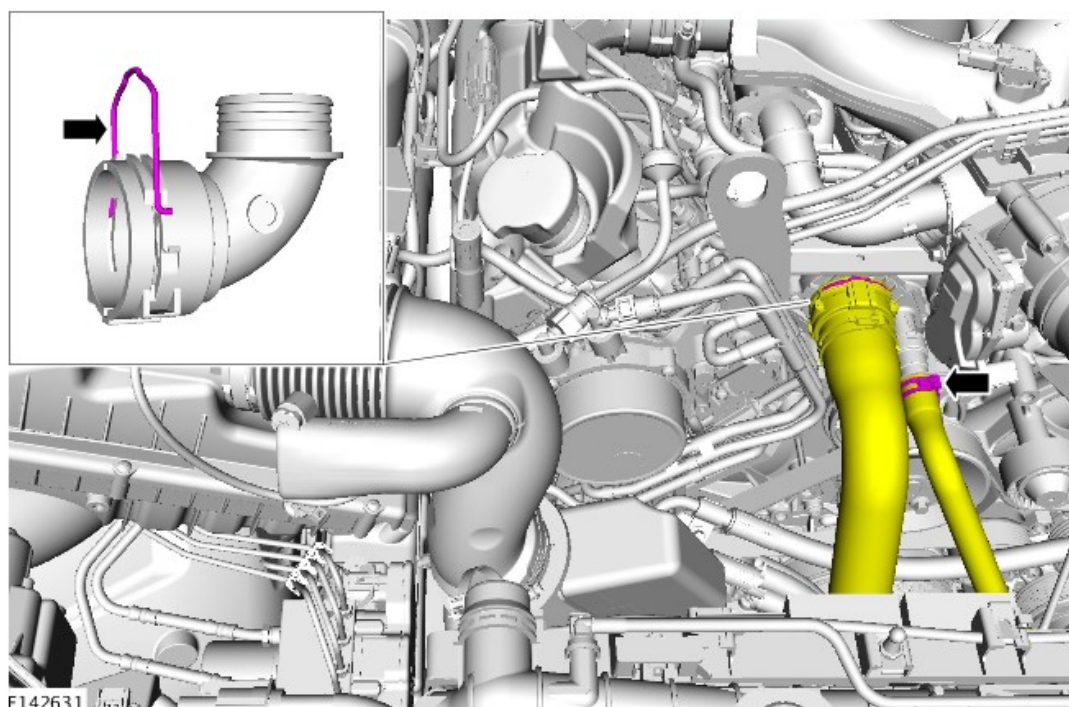




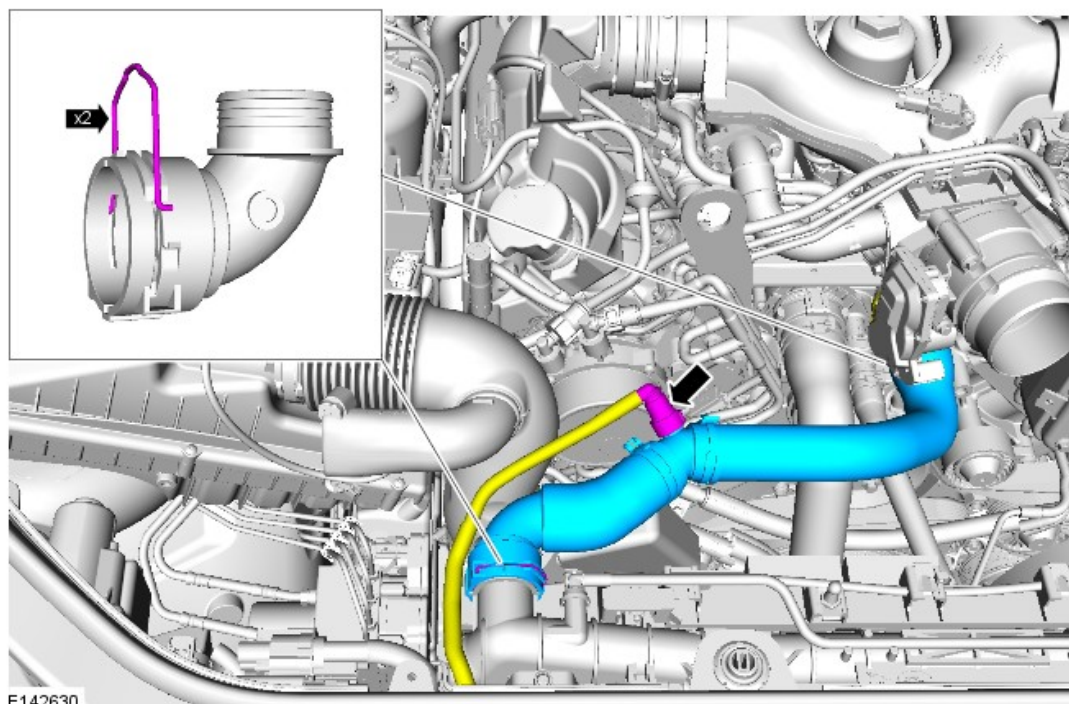



E142630

20.

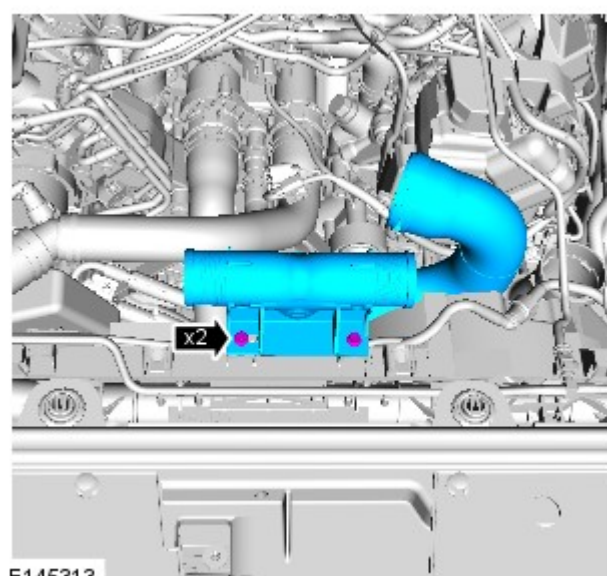

E145313

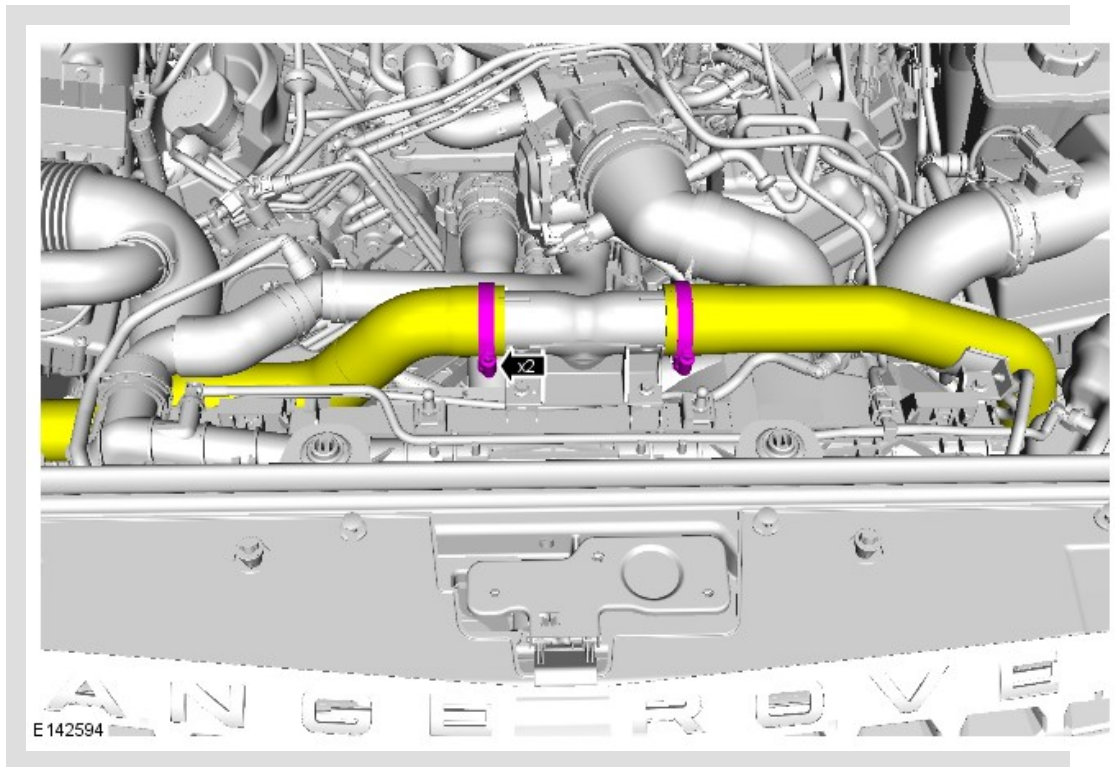

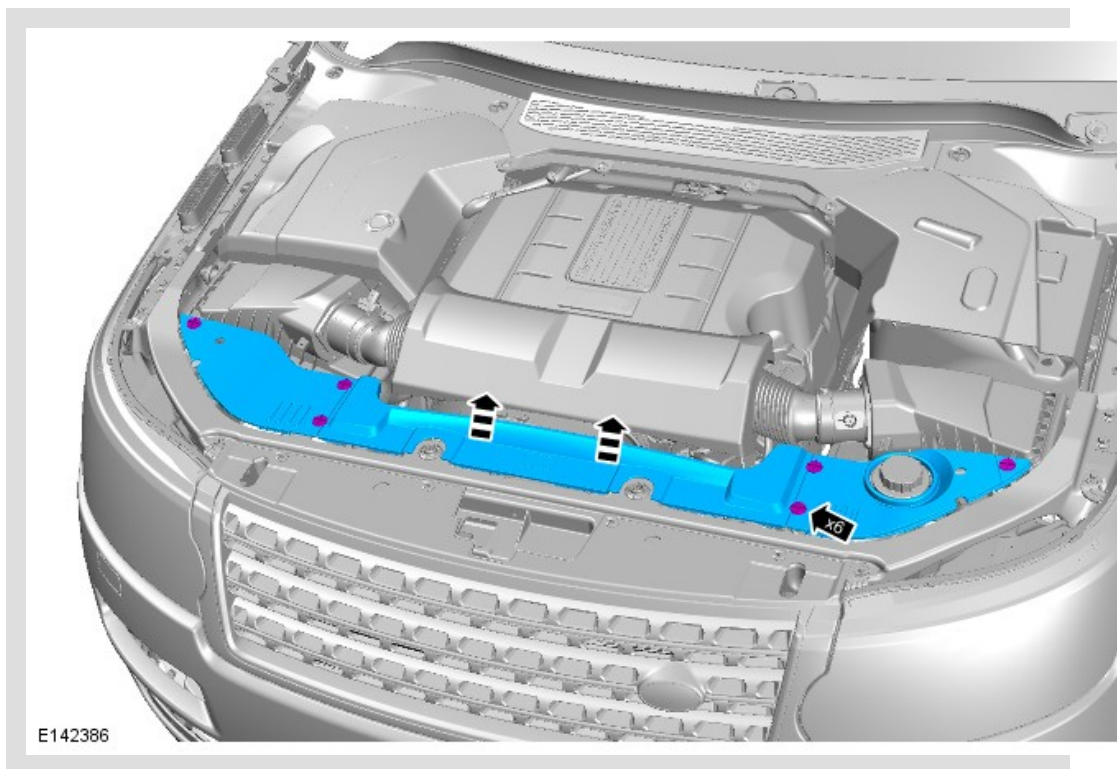

23. Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

24. Refer to: [Left Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

25. Connect the battery ground cable.  
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

26. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5, General Procedures).

27. Refer to: [High-Pressure Fuel System Bleeding](#) (310-00 Fuel System - General Information, General Procedures).