



6. Remove and discard the 4 studs from the catalytic converter.

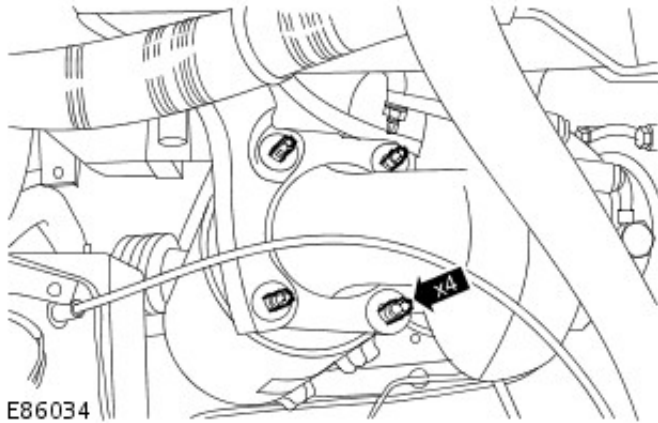


7. Remove and discard the 4 studs from the catalytic converter.

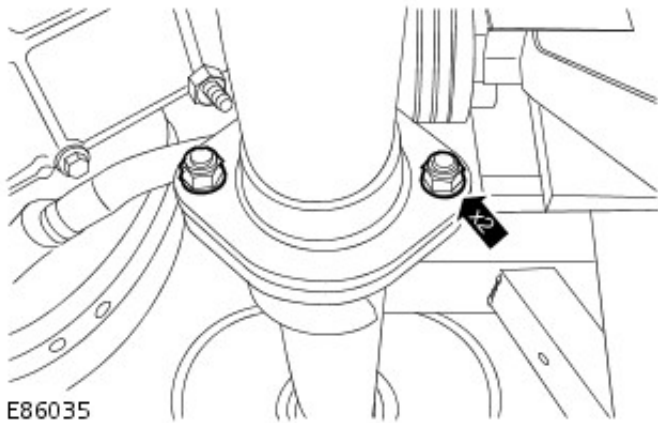

8. Release the catalytic converter.

- Remove and discard the 2 nuts.

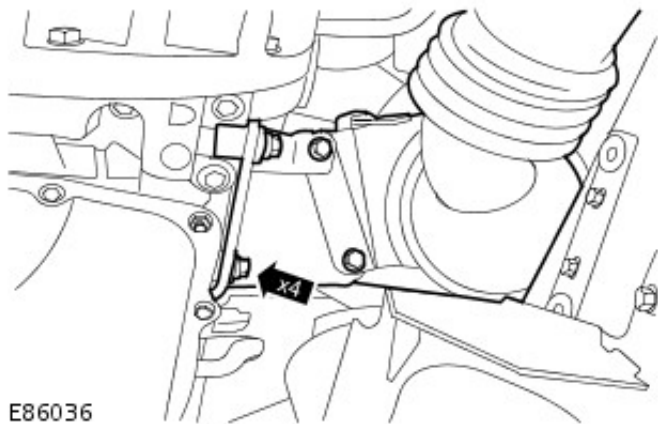

9. Release the catalytic converter.

- Loosen the 4 bolts.

10. Remove the catalytic converter bracket.