


14.  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.


Remove the turbocharger.

- Remove and discard stud.
- Remove and discard the gasket.

15. **NOTE:** Do not disassemble further if the component is removed for access only.

Remove the turbocharger inlet duct.


- Remove the 2 bolts.

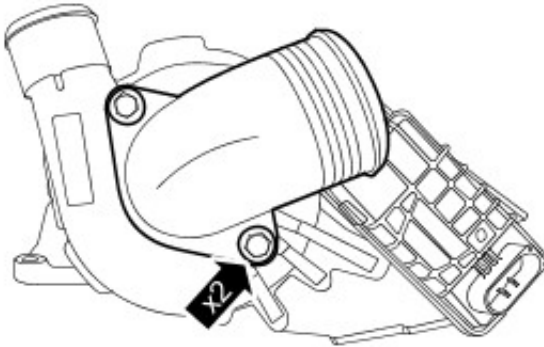

Installation

1. Install the turbocharger inlet duct.


- Tighten to 23 Nm (17 lb.ft).

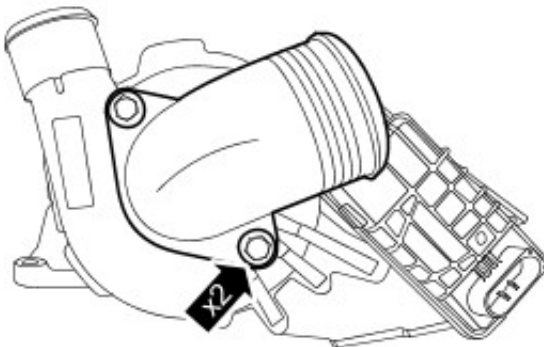

2. **NOTE:** Remove and discard the blanking caps.

Install the turbocharger.

- Install a new gasket.
- Install new studs.

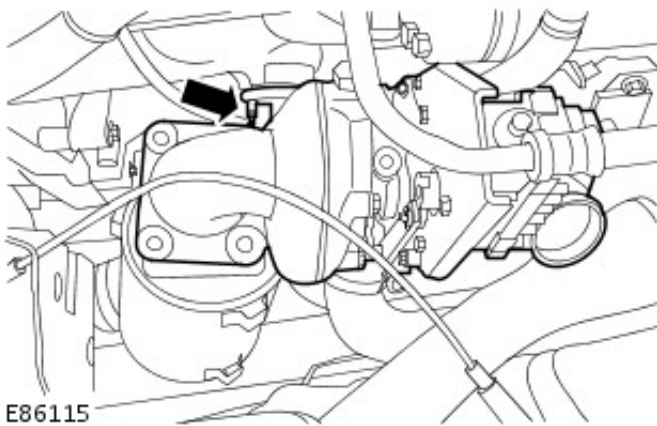

3. Install new turbocharger nuts.