


Clutch Controls - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma - Clutch Slave Cylinder


Removal and Installation

Removal


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Disconnect the battery ground cable.
For additional information, refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
3. Remove the transmission.
For additional information, refer to: [Transmission](#) (308-03 Manual Transmission/Transaxle, Removal).
4. Disconnect the fluid pipe.
 - Position an absorbent cloth to collect any fluid spillage.
 - Remove the clip.

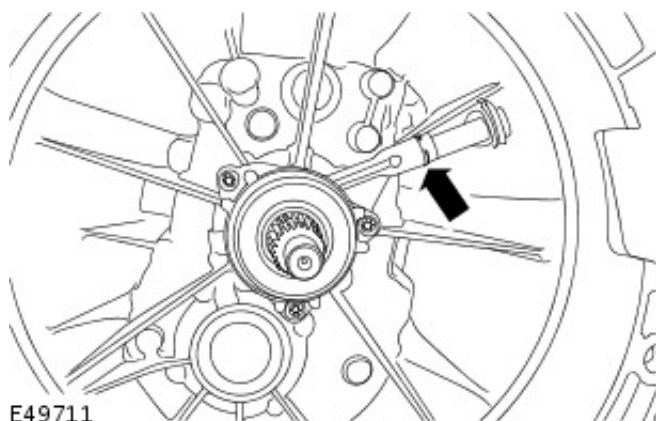

5. Remove the clutch slave cylinder.
 - Remove the 3 bolts.

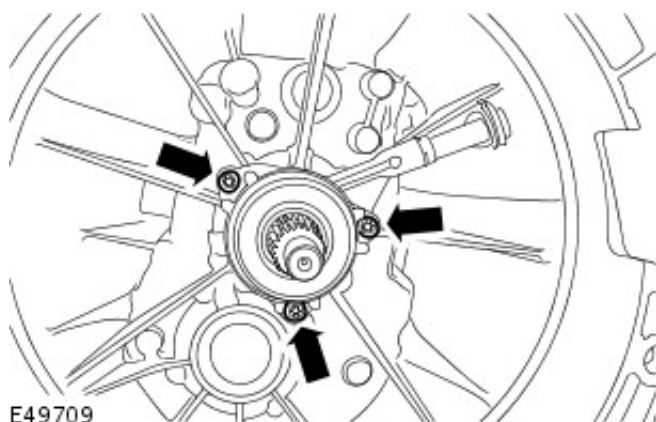

Installation

1. Install the clutch slave cylinder.
 - Tighten the bolts to 10 Nm (7 lb.ft).
2. Connect the fluid pipe.
 - Install the clip.
3. Install the transmission.
For additional information, refer to: [Transmission](#) (308-03 Manual Transmission/Transaxle, Installation).
4. Connect the battery ground cable.
For additional information, refer to: [Battery Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).