



- 10.**  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.

Disconnect the fuel injector to fuel injection pump line.

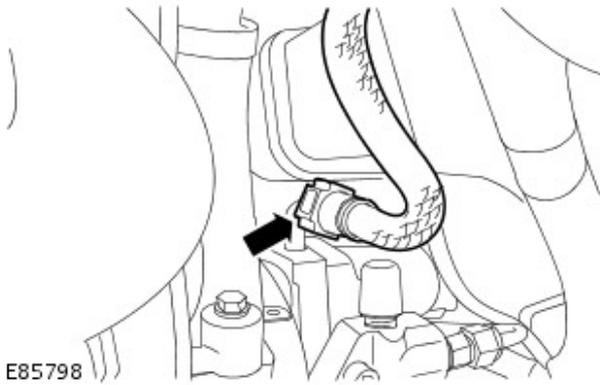


- 11.**  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.

Disconnect the fuel return line.

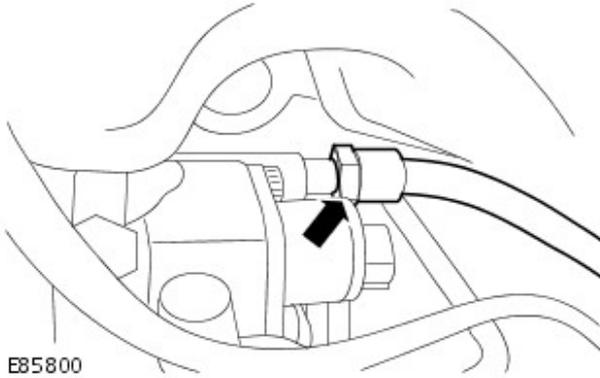


- 12.** Disconnect the fuel metering valve and the fuel temperature sensor.

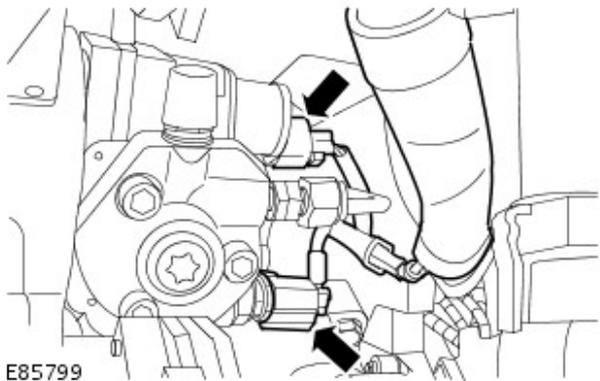

- 13.**  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.

Remove and discard the fuel injection pump high-pressure fuel line.

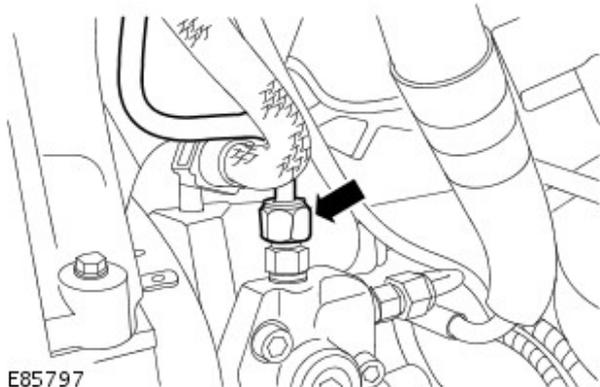

- 14.** Using the special tool, remove the fuel injection pump