

		<ul style="list-style-type: none"> circuit to power EGR control valve fault 	
P040472	Exhaust gas recirculation (EGR) control circuit range/performance - actuator stuck open	<ul style="list-style-type: none"> EGR control valve actuator circuit fault EGR control valve fault 	<p>Check the EGR control valve actuator and circuits. Refer to the electrical guides. Install a new EGR valve if necessary.</p> <p>REFER to: Exhaust Gas Recirculation (EGR) Valve (303-08 Engine Emission Control - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, Removal and Installation).</p> <p>Clear the DTCs and test for normal operation.</p>
P040473	Exhaust gas recirculation (EGR) control circuit range/performance - actuator stuck closed	<ul style="list-style-type: none"> EGR control valve actuator circuit fault EGR control valve fault 	
P14022F	Exhaust gas recirculation (EGR) control valve metering orifice restricted - signal erratic	<ul style="list-style-type: none"> EGR valve control circuit: open circuit EGR valve control circuit: short circuit to ground EGR valve control circuit: short circuit to power EGR valve fault 	<p>Check the EGR valve actuator and circuits. Refer to the electrical guides. Install a new EGR valve if necessary.</p>
P140216	Exhaust gas recirculation (EGR) control valve - circuit voltage below threshold	<ul style="list-style-type: none"> EGR valve control circuit: open circuit EGR valve control circuit: short circuit to ground EGR valve fault 	<p>REFER to: Exhaust Gas Recirculation (EGR) Valve (303-08 Engine Emission Control - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, Removal and Installation).</p> <p>Clear the DTCs and test for normal operation.</p>
P140217	Exhaust gas recirculation (EGR) control valve - circuit voltage above threshold	<ul style="list-style-type: none"> EGR valve control circuit: short circuit to power EGR valve fault 	
P140977	Exhaust gas recirculation (EGR) control valve vacuum regulator solenoid circuit - commanded position not reachable	<ul style="list-style-type: none"> EGR valve control circuit: open circuit EGR valve control circuit: short circuit to ground EGR valve control circuit: short circuit to power EGR valve fault 	<p>Check the EGR valve actuator and circuits. Refer to the electrical guides. Install a new EGR valve if necessary.</p> <p>REFER to: Exhaust Gas Recirculation (EGR) Valve (303-08 Engine Emission Control - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, Removal and Installation).</p> <p>Clear the DTCs and test for normal operation.</p>