


- Press the button to release the fitting before disconnecting the rod.

17. Remove the retaining clip at the lower end of the pivot arm.




18. Remove the differential lock control operating rod.

- Remove the nut.

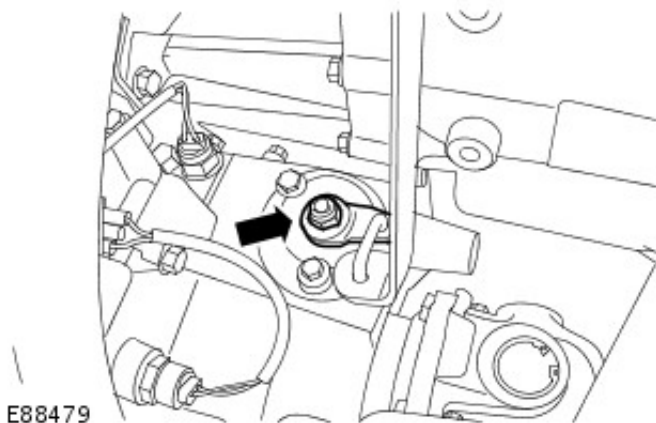

19. Release the transmission wiring harness.

- Remove the nut and bolt.

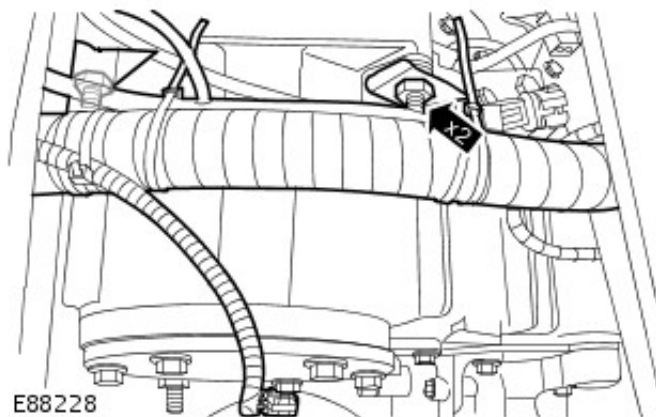

20. Drain the transfer case.

For additional information, refer to: [Transfer Case Draining and Filling](#) (308-07A Transfer Case - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, General Procedures).

21. Remove the 4 bolts.