


Parking Brake and Actuation - Parking Brake Switch

Removal and Installation

Removal

1. Release cover from parking brake lever.
2. Remove 2 bolts and release parking brake lever from body.
3. Release connector from parking brake switch.
4. Remove 2 screws securing parking brake switch to parking brake lever and remove switch.

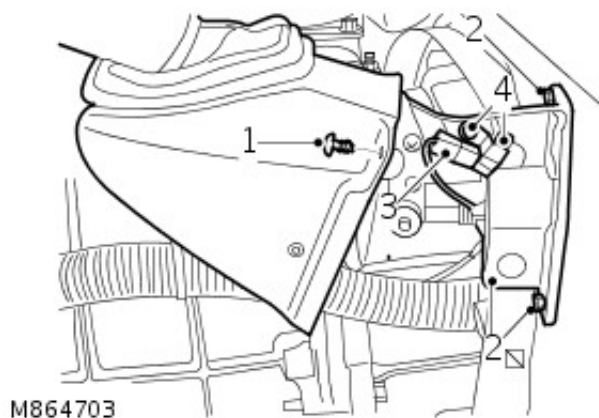

Installation

1. Install parking brake switch to parking brake lever and tighten screws.
2. Install connector to parking brake switch.
3. Position parking brake lever and tighten bolts to 22 Nm (16 lbf.ft).
4. Position cover to parking brake lever.