


On-Board Computer

Engine interlock code

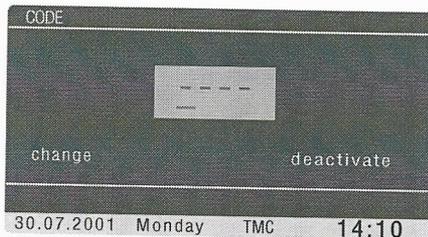

H4182

You can choose to enter a 4-digit code which will lock the ignition system. When the code has been activated, the engine will not start unless the code is deactivated.

NOTE: When the code is activated, the driver will need to enter the 4-digit code each time the engine is started. If the code is not available or has been forgotten, emergency deactivation is possible.

Activating the code

- Select 'Code' from the general menu.
- Turn the right rotary control (10) until the first digit of the desired number appears
- Press the right rotary control (10) to confirm it.
- Enter the remaining three digits in the same manner.
- To activate the code, turn the ignition key to position '0'.

Correcting an input

- Select 'Change'.
- Repeat the input procedure from the beginning.

To cancel the inputting of the code, press the 'MENU' button (9). No code is set.

Deactivating the code

When you are required to enter the code (in ignition key position 'I'):

- Turn the right rotary control (10) until the first digit of the code appears.
- Press the right rotary control (10) to confirm it.
- Enter the remaining three digits in the same manner.
- Select 'Deactivate'.

To correct the input, select 'Change' and repeat the code input.

NOTE: After three incorrect code inputs or three attempts to start the engine without a code input, an alarm will sound for 30 seconds.

Interlock code - emergency deactivation

If your code is no longer available to you there is an emergency procedure that will delete the code and allow the engine to be started.

Follow the instructions in your Owners Handbook and disconnect the earth terminal of the vehicle battery.

After at least one minute, reconnect the battery. At this point the alarm will sound so be sure to have the remote handset available to turn it off.

The vehicle systems will reset. See your Owners Handbook regarding system resetting after battery disconnection.

Turn the starter switch to position 'II'. The on-board computer will display a 10 minute counter. When the 10 minute count is completed, the engine can be started and a new code activated, if required.

NOTE: The starter switch **MUST** remain in position 'II' throughout the 10 minute count.