


PASSENGER COMPARTMENT FUSEBOX

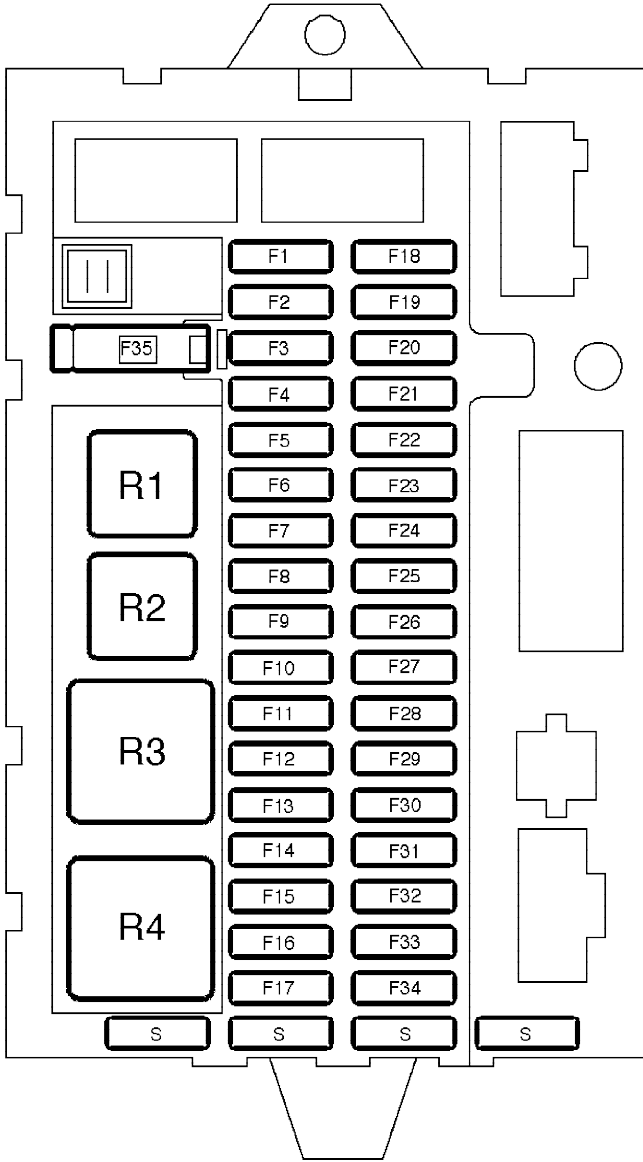

M86 4473

Fuses

Fuse	Rating, Amperes	Function
F1	25	ALL - RH front door lock motor, LH front door lock motor, RH rear door lock motor, LH rear door lock motor, tail door lock motor.
F2	10	ALL - Fuel flap release switch.
F3	10	ALL - LH Headlamp main beam bulb.
F4	10	ALL - Rear fog lamp switch, trailer socket, header 295.
F5	15	ALL - Daylight running lamp relay.
F6	25	ALL - Rear blower motor relay.
F7	30	ALL - Blower motor relay.
F8	30	ALL - HRW element, drivers door mirror, passenger door mirror.
F9	10	ALL - LH Headlamp dipped beam bulb.
F10	10	ALL - RH Headlamp dipped beam bulb.
F11	10	ALL - Header 286.
F12	30	ALL - Sunroof ECU.
F13	30	ALL - Rear window lift relay.
F14	20	V8 - Ignition coils
F15	20	ALL - IDM, header 291, header 761.
F16	15	ALL - Radio/cassette player, aerial, PDC ECU.
F17	15	ALL - Audio system power amplifier.
F18	15	ALL - Rear screen wiper motor.
F19	15	ALL - Header 292, windscreen wash/wipe switch.
F20	15	ALL - Transponder coil, header 294, header 725.
F21	15	ALL - Header 292, header 293.
F22	10	ALL - RH Headlamp main beam bulb.

FUSE DETAILS

Fuses (continued)

Fuse	Rating, Amperes	Function
F23	10	ALL - BCU, starter relay.
F24	10	Td5 - EAT ECU, header 287.
F24	10	V8 - Ignition relay, EAT ECU, ECM.
F25	15	ALL - Brake pedal switch.
F26	10	ALL - Auxiliary relay.
F27	10	ALL - Header 760.
F28	10	ALL - SLABS ECU.
F29	10	ALL - BCU, ACE ECU, IDM.
F30	20	Td5 - Mirror switch.
F30	20	V8 - Cruise control switch, mirror switch.
F31	10	ALL - Header 289, ATC ECU, fresh/recirculated air switch.
F32	25	ALL - Accessory socket.
F33	10	ALL - Header 290, header 759.
F34	30	ALL - BCU.
F35	10	ALL - Instrument pack, SRS DCU.

Relays

Relay	Function
R1	LH indicators
R2	RH indicators
R3	Rear window lift
R4	Ignition