

3. Remove screw securing harness to blower motor and release harness.
4. Disconnect multiplug from blower motor.
5. Remove 3 screws securing blower motor to casing and remove blower motor.


Refit

1. Position blower motor to casing and secure with screws.
2. Connect multiplug to blower motor.
3. Position harness and secure clip with screw.
4. Fit glove box, align hinges and tighten screws.
5. Position toe board and secure with studs.


Resistor pack - power resistor A/C

➔ 80.20.17


Remove

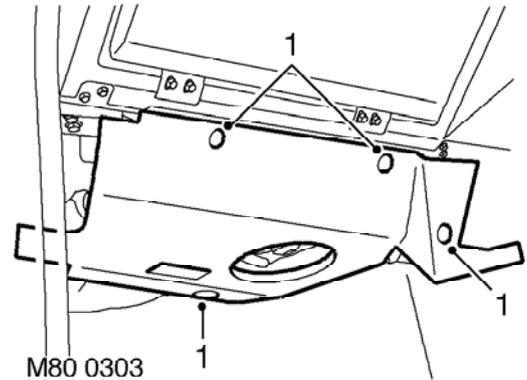

1. Remove 4 studs securing toe board and remove toe board.

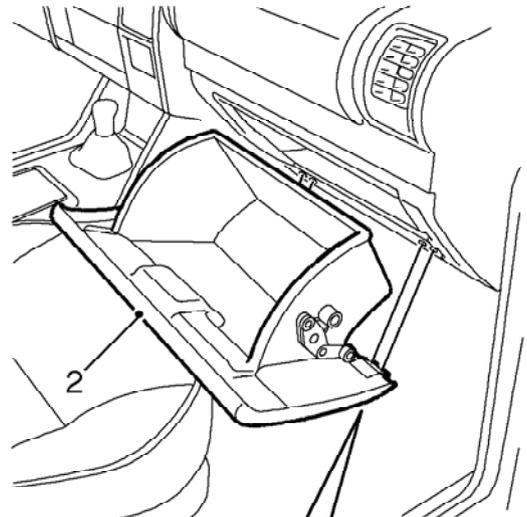

2. Remove 4 screws securing glove box, release catch and remove glove box.

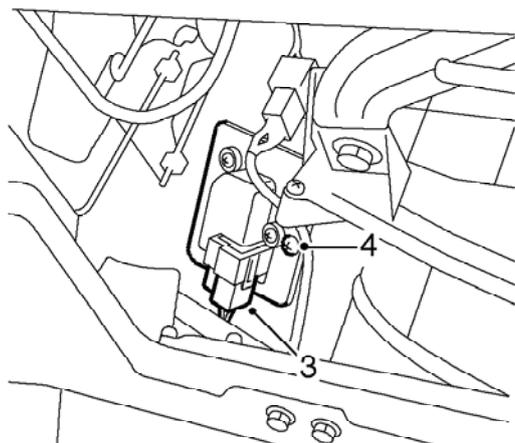

M80 0320

3. Disconnect multiplug from resistor.
4. Remove screws securing resistor, release and remove resistor.

Refit


1. Position resistor and secure with screw.
2. Connect multiplug to resistor.
3. Position glove box, fit and tighten screws.
4. Position toe board and secure with studs.

Heater matrix

80.20.29

Remove

1. Remove heater assembly.
HEATING AND VENTILATION, REPAIRS, Heater assembly - models with air conditioning.

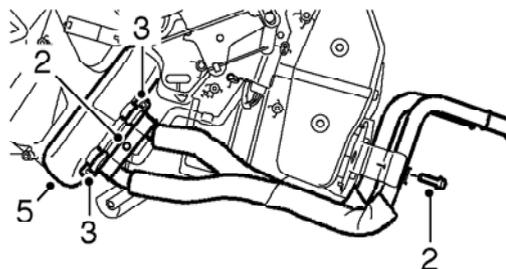

M80 0293

2. Remove 2 screws securing coolant pipe saddles and remove saddles.
3. Loosen screws securing coolant pipes to matrix, release clamps and remove coolant pipes.
4. Remove and discard 'O' rings.
5. Remove heater matrix.

Refit

1. Position heater matrix, using new 'O' rings fit coolant pipes and align clamps.
2. Fit saddle clamps and secure with screws
3. Tighten coolant pipe clamp screws.
4. Fit heater assembly.
HEATING AND VENTILATION, REPAIRS, Heater assembly - models with air conditioning.