


# Handles, Locks, Latches and Entry Systems - Door Lock Cylinder

## Removal and Installation


### Removal

1. Remove door trim panel and plastic sheet.  
For additional information, refer to: Front Door Trim Panel (501-05, Removal and Installation).
2. Remove reinforcement panel.  
For additional information, refer to: Front Door Reinforcement Panel (501-03, Removal and Installation).
3. Raise and support glass to gain access to latch mechanism.
4. Release spring clip and disconnect rod from lock operating lever.
5. Remove single screw and withdraw lock lever assembly.

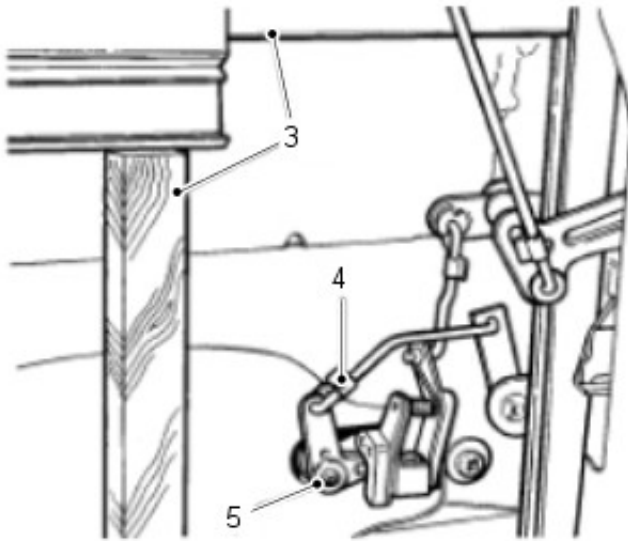

ST1981M

6. Withdraw lock barrel from exterior door handle complete with locking sleeve.

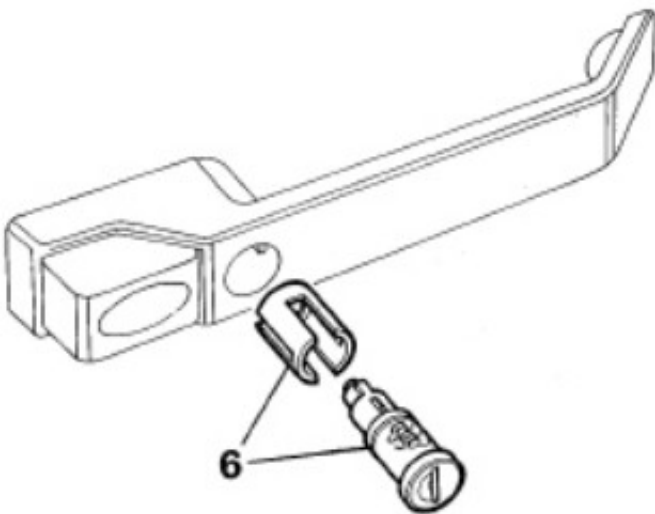

ST1980M

7. To remove barrel from plastic retaining sleeve, depress spring loaded button and withdraw sleeve.