



10M0494

5. Fit battery cover and secure with clip.

6. Fit drivers seat base.

Handset Battery

NOTE: Do not remove a battery until you are ready to install the replacement. Always fit a Land Rover STC4080 or a Panasonic CR2032 replacement battery.

1. Unlock the vehicle and disarm the alarm system.

2. Turn the ignition switch to position 'II', then turn to position '0' and remove the key.



CAUTION: Do not allow moisture to get inside the handset.

3. Carefully prise the handset apart, starting from the keying end. Avoid damaging the seal between the two halves of the case.

4. Slide the battery out of its clip, taking care to avoid touching the circuit board or the contact surfaces of the clip.

5. Press and hold one of the buttons for at least 5 seconds to drain any residual power from the handset.

6. Fit the new battery, making sure that correct polarity is maintained (+ve side facing up). Finger marks will adversely affect battery life. Avoid touching the flat surfaces of the battery, and wipe clean before fitment.

7. Reassemble the two halves of the handset. Operate the Padlock symbol button at least 4 times within range of the vehicle to resynchronise the handset.

Headlamp Alignment

1. Check alignment of headlamps.

For additional information, refer to: Headlamp Adjustment (417-01 Exterior Lighting, General Procedures).

Road Wheels

1. Loosen wheel nuts. Raise vehicle for wheel free condition and remove the wheel nuts.

2. Mark the wheel to stud relationship to make sure that the wheels are refitted in the same orientation.

3. Apply a thin coat of anti-seize compound to wheel hub centre.

NOTE: When refitting road wheel nuts do not over tighten using powered tools. Make sure the wheel nuts are correctly tightened in the correct sequence.

4. Refit wheels to original hub position.

5. Tighten wheel nuts.

- Steel wheels - 100 Nm (80 lbf/ft)
- Alloy wheels - 130 Nm (96 lbf/ft)
- Heavy Duty wheels - 170 Nm (125 lbf/ft)

Tire Pressures, Condition and Tread Depth