
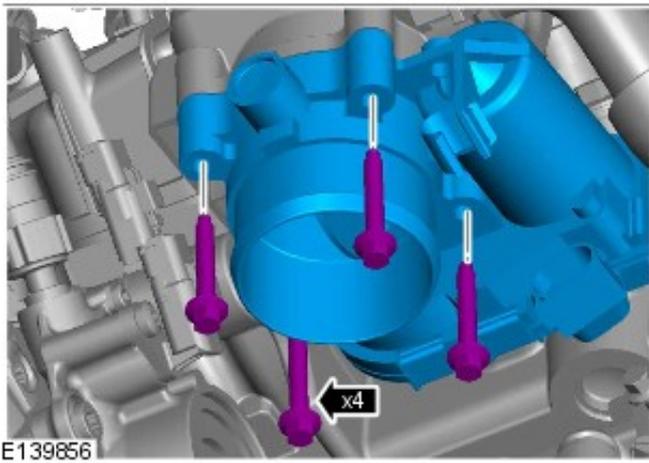


- NOTE: Fit new gasket.  
NOTE: Tighten the bolts in the indicated sequence.  
Torque Stage 1: 4Nm, Stage 2: 7Nm

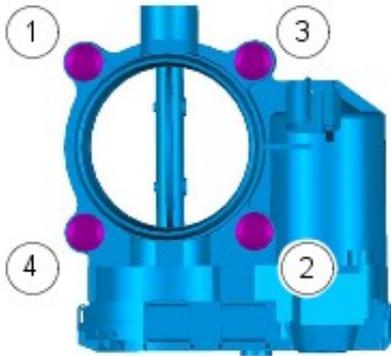

### Installation

- To install, reverse the removal procedure.