



M18 0339

## INERTIA

### Service |

### Remove

1. Rel 'A' |

6. Noting their fitted position disconnect HT leads from coils.
7. Remove 6 screws securing coils to support bracket and remove coils.