
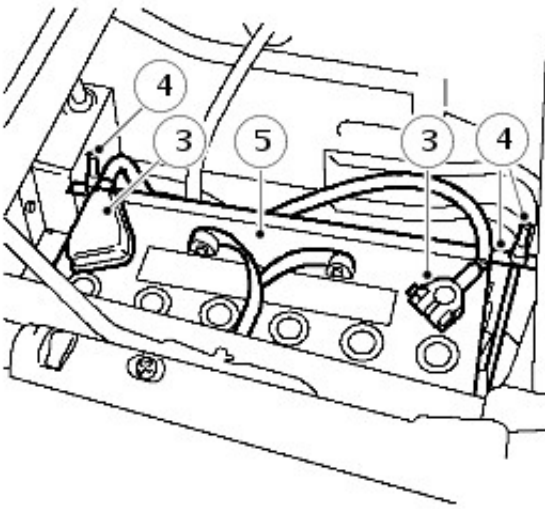


Battery, Mounting and Cables - Battery

Removal and Installation

Removal

1. Remove LH front seat cushion.
 2. Release retaining clip and remove battery access cover.
 3.  **WARNING:** During battery removal or before carrying out any repairs or maintenance to electrical components always disconnect negative lead first. If positive lead is disconnected with negative lead in place, accidental contact of a wrench to any grounded metal part could cause a severe spark, possibly resulting in personal injury. Upon installation of battery always connect positive lead first.
- Disconnect both battery leads, negative first.
4. Slacken securing nuts and move battery clamp, with 'J' bolts aside.
 5. Remove battery.



J6081

Installation

1. **NOTE:** Coat battery clamps and terminals with petroleum jelly before refitting.
- Position battery and secure with clamp. Ensure 'J' bolts are hooked correctly under retaining brackets on base of battery box.
2. Reconnect battery leads, positive lead first.
 3. Install battery access cover.
 4. Install seat cushion.