


- Remove the 2 bolts.
- Remove the 2 nuts.

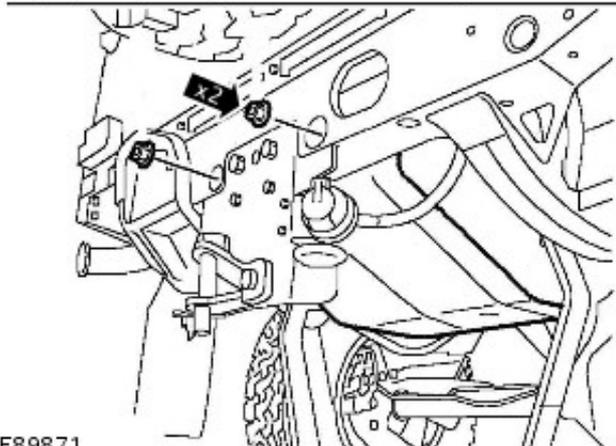


E89871

8.  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.

Disconnect the fuel filler pipe breather hose.

- Release the clip.

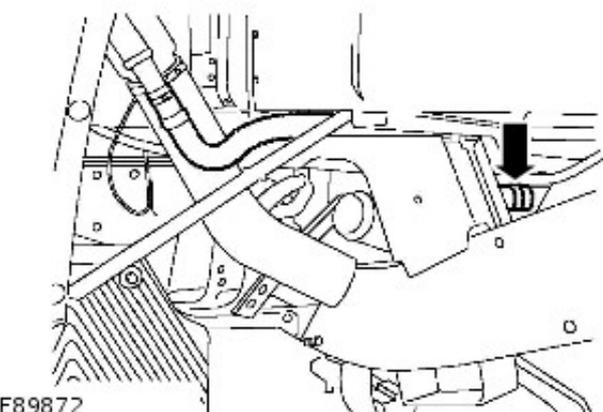


E89872

9.  **CAUTION:** Make sure that all openings are sealed. Use new blanking caps.

- **NOTE:** Note the fitted position of fuel lines.

Remove the fuel tank and the fuel tank support bracket.

- Disconnect the 2 fuel lines.
- Disconnect the electrical connector.

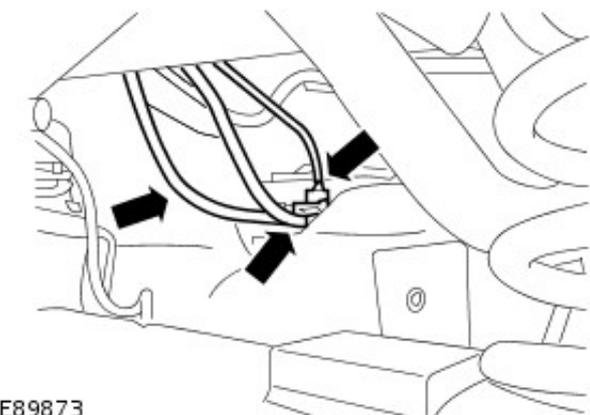

E89873

10. **NOTE:** Do not disassemble further if the component is