




Using the special tool, remove the fuel injection pump drive gear cover.

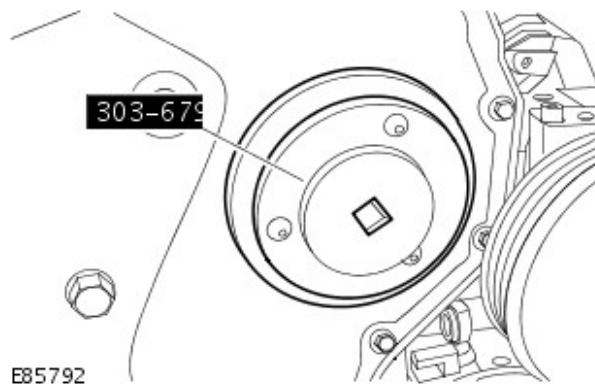


**15. Install the special tools.**

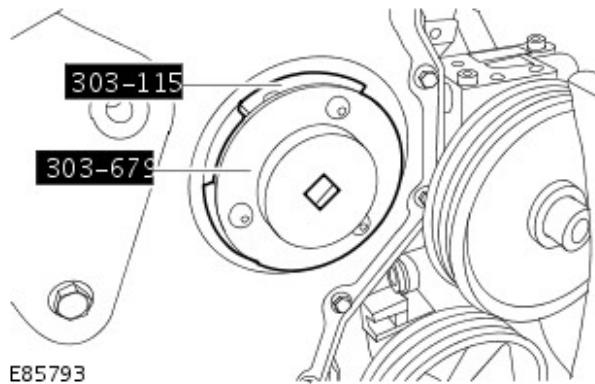

**16. Release the fuel injection pump drive gear.**

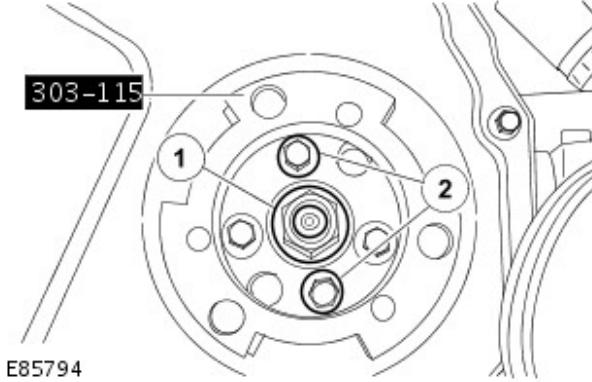

**17. Remove 2 bolts from the fuel injection pump.**

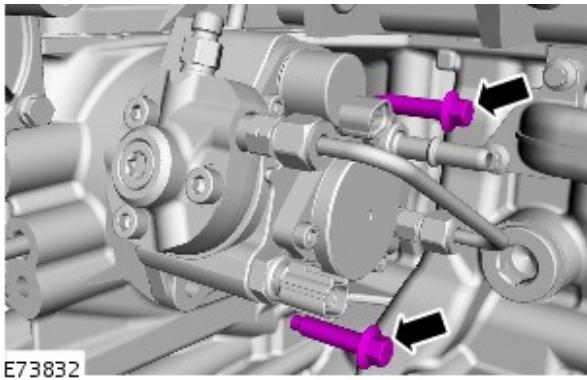

**18. Using the special tool, release the fuel injection pump.**