

NOTE: Do not disassemble further if the component is removed for access only.

Remove the fuel tank heat shield.

- Remove the 3 clips.

E89874




11. Remove the fuel tank vent line.

- Release the clip.

12. Remove the fuel level sender.

- Using the special tool, remove the locking ring.
- Remove and discard the seal.

E89875

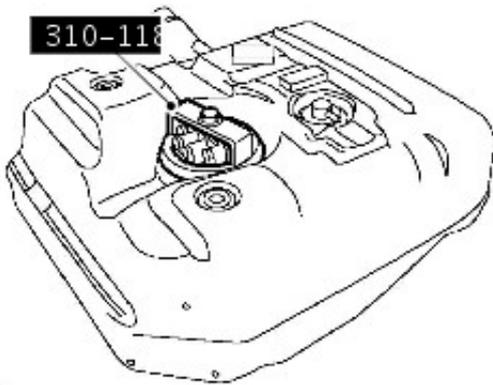


Installation

1. NOTE: Clean the component mating faces.

Install the fuel level sender.

- Install a new seal.
- Using the special tool, tighten the locking ring to 35 Nm (26 lb.ft).

E89875

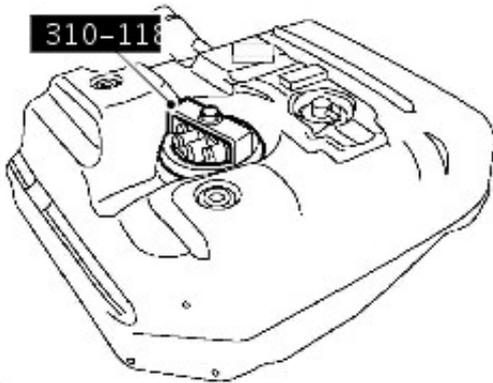

2. Install the fuel tank vent line.

- Secure with the clip.

3. Install the fuel tank heat shield.

- Install the 3 clips.

4. NOTE: Remove and discard the blanking caps.

Using the special tool, raise the fuel tank and the fuel tank support bracket.

- Connect the 2 fuel lines.
- Connect the electrical connector.

5. Connect the fuel filler pipe breather hose.

Secure with the clip.