



Remove the special tool.

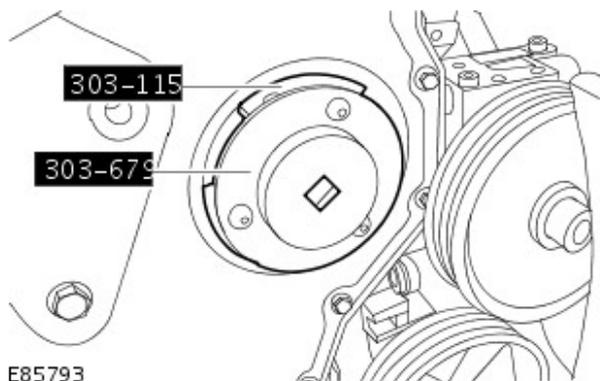

5. Using the special tool, install the fuel injection pump drive gear cover.

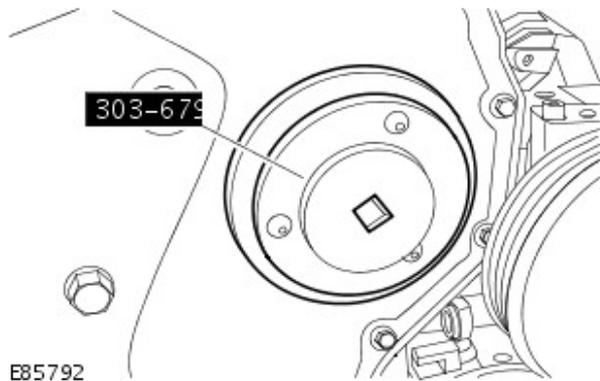


6. NOTE: Remove and discard the blanking caps.

Loosely install a new high-pressure fuel line.

- Loosely install the high-pressure pipe clamps.


7. Install the fuel injection pump high-pressure fuel line.

- Tighten to 35 Nm (26 lb.ft).

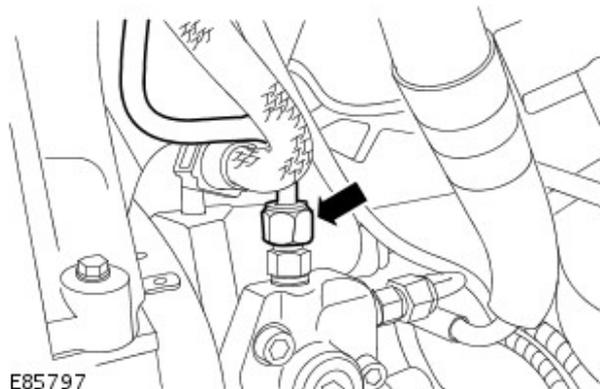

8. Secure the fuel injection pump high-pressure fuel line.

- Tighten to 10 Nm (7 lb.ft).
- Tighten to 35 Nm (26 lb.ft).

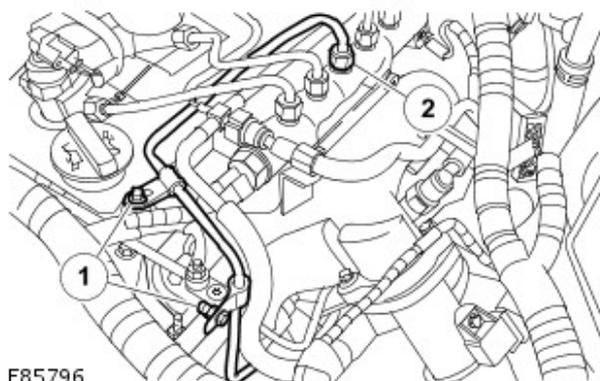

9. Connect the fuel metering valve and the fuel temperature sensor.

10. NOTE: Remove and discard the blanking caps.

Connect the fuel return line.

11. Secure the wiring harness to the inlet pipe.