


# Jatco 5 Speed

7

6. Remove the (22) bellhousing to case bolts.
7. Lightly tap the converter housing with a plastic hammer to separate the halves.

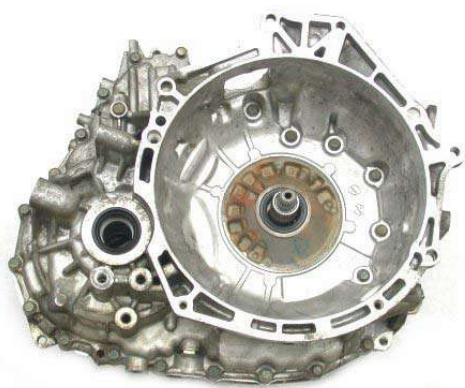

8. Remove the differential.
9. Remove the filter, pump O-ring and the input shaft O-ring.




10. Remove the front pump and the gasket.
11. Remove the input shaft.



# Jatco 5 Speed

12. Remove the reduction gear assembly.
13. Remove the reduction sun gear assembly.

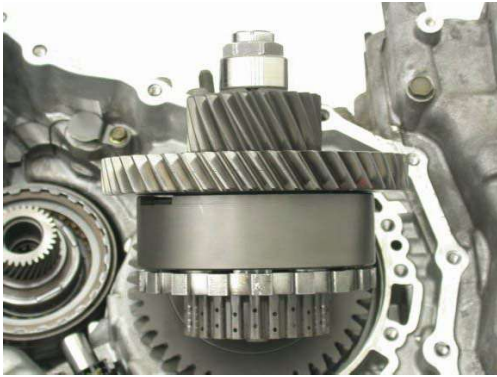

14. Remove the direct clutch.
- 15.. Remove the reduction brake band and the band anchor bolt.



16. Remove the (16) rear case cover bolts. Note the O-rings on the two larger bolts.

