





MAIN CASING COMPONENTS

- | | |
|---|--|
| 1. Main casing | 15. Collapsible spacer |
| 2. Retaining plate | 16. Intermediate gears |
| 3. Bolt - retaining plate | 17. Bottom cover plate |
| 4. Stake nut - intermediate shaft | 18. Bolt - bottom cover plate |
| 5. Bearings and outer tracks - mainshaft input gear | 19. 'O' rings - intermediate shaft |
| 6. Mainshaft input gear * | 20. Intermediate shaft |
| 7. Selective shim | 21. Mainshaft oil seal |
| 8. Mainshaft input gear bearing housing | 22. Locating dowel |
| 9. Cover plate/power take-off cover * | 23. Detent plug - high/low selector |
| 10. Bolt - cover plate | 24. Detent spring - high/low selector |
| 11. Oil temperature switch ** | 25. Detent ball - high/low selector |
| 12. Neutral warning lamp switch and washer ** | 26. Interlock solenoid ** |
| 13. Bearings and outer tracks - intermediate gears | 27. Cover - interlock solenoid ** |
| 14. Circlips | 28. Bolt - interlock solenoid cover ** |
| | 29. Belleville washer ** |

* Defender mainshaft input gear and Discovery power take-off cover plate illustrated

** If fitted