


# Fuses

---

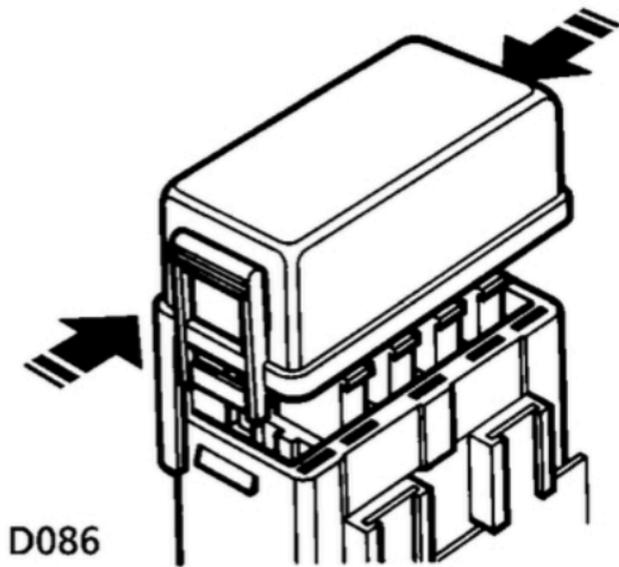

## ENGINE COMPARTMENT FUSE BOX

A second fuse box, containing four main fuses is located on the left side of the engine compartment attached to the bulkhead.

The circuits protected, their locations and their ratings will vary from model to model in the vehicle range.

### WARNING

*Fit only replacement fuses of the same rating and type. Always rectify the cause of a failure before replacing a fuse. Seek qualified assistance if necessary.*

---