


Application: Harmon Kardon/Becker Traffic Pro.(Freelander Model)

Installing a Phone Mute/Loudspeak Kit

- Remove the head unit from the dashboard.
- Remove the power/speaker connector from the back of your head unit.
- Locate the single wire from the cable kit and insert it into **pin #3 of the A Socket** as found on diagram below. This wire will activate the Phone Mute and Audio circuits of the radio when properly connected to the mute trigger lead of your phone.
- Locate the **single red tipped female RCA jack** from the modification kit.
- Remove the C3 Socket connector from your radio. If your radio does not have one, find the one enclosed in the cable kit.
- Insert the **red lead from the single RCA cable into pin #13** and insert the **black lead into pin #14 of the C3** connector as shown below. This lead will allow you to input telephone audio from your phone.

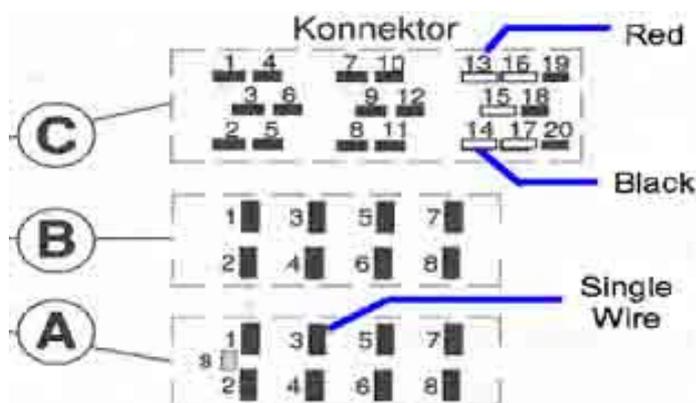

- **Note: Please reconnect the power/speaker connector to the back of the unit and install it back into the dashboard.**

To select phone input:



Turn radio ON., press and hold the following button for 8 seconds to access the submenu.

When User menu is displayed, select **Tel** to change settings from **OFF** to **ON**.
(Press the button located directly under **Tel** on the display to change the present setting from OFF to **ON**)

Turn radio **off**.

When properly connected, your radio will display **PHONE** when a call is being received. The radio audio will mute and the telephone audio will be heard through the vehicle speaker system.

More useful info is available from - <http://z3ers.com/01/081501/becker.html>