



HAWKEYE GREY DONGLE INTERNAL CONNECTIONS

HAWKEYE DONGLE MALE PIN NUMBERING

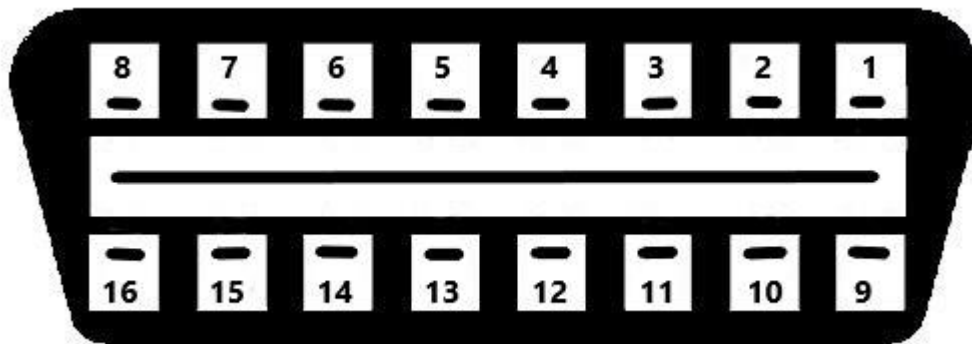

HAWKEYE DONGLE FEMALE SOCKET NUMBERING

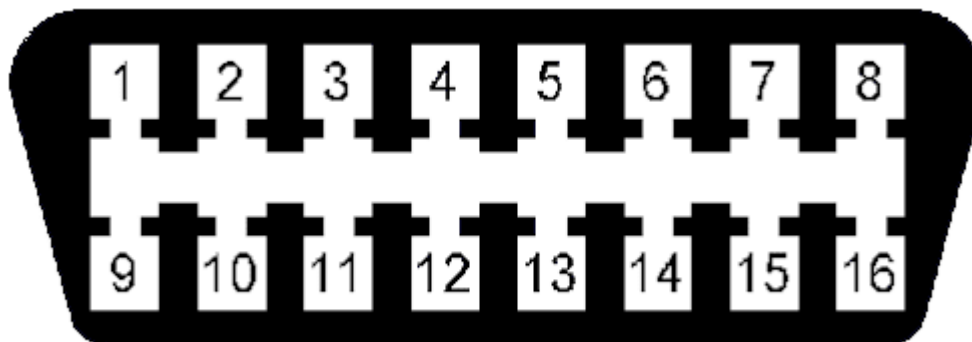

CAR DIAGNOSTIC SOCKET CONNECTIONS (To Be Confirmed)	DONGLE MALE PIN NUMBER	Connects to	DONGLE FEMALE SOCKET NUMBER
EAS Delay Timer ?	1	→	NC
SAE J1850 Bus +	2	→	NC
	3	→	NC
Chassis / Signal Ground	4	→	4
Chassis / Signal Ground	5	→	5
ISO 15765-4 (Can Bus High)	6	→	NC
ISO 9141 (K – Line) (BECM, HEVAC, ABS, Engine & Auto Box)	7	→	NC
	8	→	NC
	9	→	NC
SAE J1850 Bus -	10	→	NC
EAS ECU ?	11	→	NC
EAS ECU ?	12	→	NC
	13	→	7
ISO 15765-4 (Can Bus Low) (Airbags / SRS)	14	→	15
ISO 9141 (L – Line)	15	→	NC
12 Volt + (Always On)	16	→	16