


Transfer Case - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma - Transfer Case Draining and Filling

General Procedures


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


2. Position a container to collect the fluid.

3. **NOTE:** Clean the area surrounding the transfer case filler/level plug.

Remove the transfer case filler plug to vent the transfer case and assist with draining.

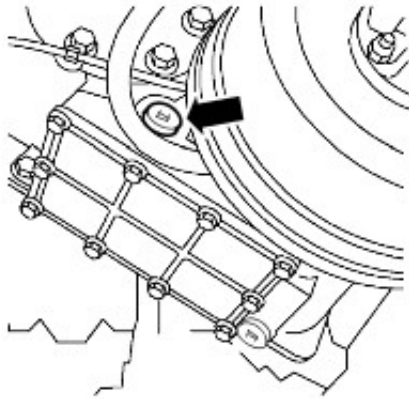


E91241

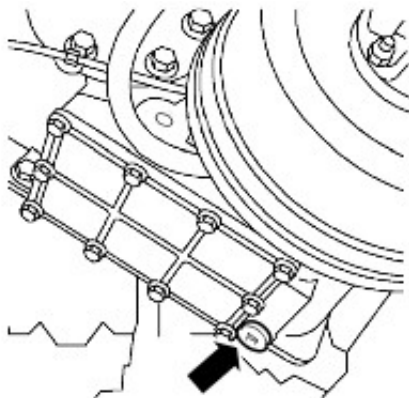

E91242


4. **NOTE:** Clean the area surrounding the transfer case fluid drain plug.

Remove the transfer case fluid drain plug.

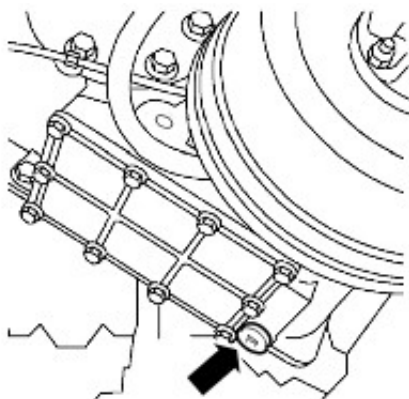

E91242

5. Allow the fluid to drain.
6. Install the transfer case drain plug and clean any oil residue from the surrounding area.
 - Tighten to 30 Nm (22 lb.ft).

7.  **CAUTION:** The transfer case oil filler plug must not be used as a transfer case oil level plug. Failure to follow this instruction may result in damage to the vehicle.

Refill the transfer case with the recommended fluid.

For additional information, refer to: [Specifications](#) (308-07A Transfer Case - 2.4L Duratorq-TDCi HPCR (103kW/140PS) - Puma, Specifications).

8. Install the transfer case filler plug and clean any oil residue